

# Upgrading a Scadaflex II to a Scadaflex II-M

---

This document describes the upgrade procedure for the converting a Scadaflex II using the normal code to a Scadaflex II-SC1M or SC2M. You will NOT be able to backup and restore a configuration between the old and new code.

- 1) Download the new firmware from the Maintenance|System page, by pressing the [Download Firmware] button. Then drop ( or browse ) the file SFX2\_SCxMxxxxx.sfs and pressing the [Download Firmware] button on the dialog. The downloaders are different between the Scadaflex and the Scadaflex-M so you will need to refresh the web browser once the download is complete. The download is complete when the browser shows "Installing Firmware" and the display on the unit shows "Scadaflex II SCxM"
- 2) After refreshing the browser you should see the Scadaflex-M menus, the First thing you MUST do is navigate to the System|Miscellaneous page and press [Restore Factory Defaults(Not IP) ] button.
- 3) Upgrade the WFS if it is out of date.
- 4) If you have an SD card you will need to reformat it as the Scadaflex-M uses a different format that the old Scadaflex II's.