



**MM2**  
**Spread Spectrum**  
**Wireless Data Transceiver**  
**User Manual**  
**Version 1.6**

**FreeWave Technologies, Inc.**  
1880 South Flatiron Court  
Boulder, CO 80301  
(303) 444-3862  
(303) 786-9948 Fax  
[www.FreeWave.com](http://www.FreeWave.com)

**MM2 USER MANUAL**

Copyright © 1995-2008 by FreeWave Technologies, Inc. All rights reserved. Published 2008.

**WARRANTY**

FreeWave Technologies warrants the FreeWave Wireless Data Transceiver against defects in materials and manufacturing for a period of two years from the date of purchase. In the event of a Product failure due to materials or workmanship, FreeWave will, at its discretion, repair or replace the Product.

In no event will FreeWave Technologies Inc., its suppliers, and its licensors be liable for any damages arising from the use of or inability to use this Product. This includes business interruption, loss of business information, or other loss which may arise from the use of this Product. Please be advised that OEM customer's warranty periods may vary.

Warranty Policy may **not apply**:

1. If Product repair, adjustments or parts replacements is required due to accident, neglect, unusual physical, electrical or electromagnetic stress.
2. If Product is used outside of FreeWave specifications.
3. If Product has been modified, repaired or altered by Customer unless FreeWave specifically authorized such alterations in each instance in writing. This includes the addition of conformal coating.

The Warranty period begins from the date of shipment and is defined per the Standard Warranty Policy stated above.

**Special Rate Replacement Option**

A special rate replacement option is offered to non-warranty returns or upgrades. The option to purchase the replacement unit at this special rate is only valid for that RMA, (Return Material Authorization). The special replacement rate option expires if not exercised within 30 days of final disposition of RMA.

**RESTRICTED RIGHTS**

Microsoft and Windows are registered trademarks of the Microsoft Corporation. pcANYWHERE is a registered trademark of Symantec Corporation. Other product names mentioned in this manual may be copyrights, trademarks, or registered trademarks of their respective companies and are hereby acknowledged.

Information in this document is subject to change without notice. The information contained in this document is proprietary and confidential to FreeWave Technologies, Inc.

This manual is for use by purchasers and other authorized users of the FreeWave™ Spread Spectrum Wireless Data Transceiver only.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, or for any purpose without the express written permission of FreeWave Technologies, Inc.

FreeWave's Spread Spectrum Wireless Data Transceivers are made in the United States of America.

Printed in the United States of America.

**This product is licensed by The United States. Diversion contrary to U.S. law is prohibited. Shipment or re-export of this product outside of The United States may require authorization by the U.S. Bureau of Export Administration. Please contact FreeWave Technologies for assistance and further information.**

#### **UL NOTIFICATION**

Models MM2-T-U, MM2-HS-T-U are suitable for use in Class 1, Division 2, Groups A, B, C, and D or non-hazardous locations only. Input voltage for the above models is 5 volts +/- 5% DC.

Models MM2-LV-T-U, MM2-HS-LV-T-U are suitable for use in Class 1, Division 2, Groups A, B, C, and D or non-hazardous locations only. Input voltage for the above models is 3.3 volts +/- 5% DC.

#### **FCC NOTIFICATIONS**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference and 2) this device must accept any interference received, including interference that may cause undesired operation. This device must be operated as supplied by FreeWave Technologies, Inc. Any changes or modifications made to the device without the express written approval of FreeWave Technologies may void the user's authority to operate the device.

**CAUTION:** The MM2 transceivers have a maximum transmitted output power of 1000mW. It is recommended that the transmit antenna be kept at least 23 cm away from nearby persons to satisfy FCC RF exposure requirements.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, no guarantee shall be made that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** Whenever any FreeWave Technologies module is placed inside an enclosure a label **must** be placed on the outside of that enclosure which includes the module's FCC ID.

## Table of Contents

<b>ABOUT FREEWAVE TRANSCEIVERS.....</b>	<b>6</b>
<b>ABOUT FREEWAVE TRANSCEIVERS.....</b>	<b>6</b>
OEM / ENGINEERING NOTIFICATION.....	6
<b>CHOOSING POINT-TO-POINT OR POINT-TO-MULTIPOINT OPERATION.....</b>	<b>7</b>
<b>QUICK START ON A POINT-TO-MULTIPOINT NETWORK .....</b>	<b>8</b>
POINT-TO-MULTIPOINT OPERATION LED'S .....	8
<b>QUICK START ON A POINT-TO-POINT NETWORK.....</b>	<b>9</b>
POINT-TO-POINT OPERATION LED'S.....	9
<b>CHOOSING A LOCATION FOR THE TRANSCEIVERS.....</b>	<b>10</b>
<b>SETTING UP THE TRANSCEIVER USING HYPERTERMINAL .....</b>	<b>11</b>
ACCESSING HYPERTERMINAL'S SETUP MENU .....	11
CONNECTING AND DISCONNECTING FROM HYPERTERMINAL.....	14
TROUBLESHOOTING HYPERTERMINAL .....	15
<b>SETTING UP A TRANSCEIVER .....</b>	<b>16</b>
<b>OPERATION MODE.....</b>	<b>17</b>
SET OPERATION MODE.....	19
<b>BAUD RATE.....</b>	<b>20</b>
SET BAUD RATE.....	20
<b>CALL BOOK .....</b>	<b>22</b>
EDIT CALL BOOK .....	23
PROGRAMMING POINT-TO-POINT EXTENDED CALL BOOK TO USE THREE OR FOUR REPEATERS .....	24
PROGRAMMING POINT-TO-MULTIPOINT CALL BOOK .....	24
PROGRAMMING POINT-TO-MULTIPOINT EXTENDED CALL BOOK .....	25
<b>RADIO TRANSMISSION CHARACTERISTICS.....</b>	<b>25</b>
EDIT RADIO TRANSMISSION CHARACTERISTICS .....	26
<i>FreqKey in 900 MHz Transceivers.....</i>	26
(0) <i>Hop Table Version.....</i>	27
(1) <i>Hop Table Size.....</i>	27
(2) <i>Hop Freq Offset.....</i>	27
(3) <i>Frequency Zone.....</i>	28
(1) <i>Max Packet Size and (2) Min Packet Size.....</i>	30
(3) <i>Xmit Rate.....</i>	32
(4) <i>RF Data Rate.....</i>	32
(5) <i>RF Xmit Power.....</i>	33
(6) <i>Slave Security.....</i>	33
(7) <i>RTS to CTS.....</i>	33
(8) <i>Retry Time Out.....</i>	34
(9) <i>Lowpower Mode.....</i>	35
(A) <i>High Noise.....</i>	35
(B) <i>MCU speed.....</i>	36
<b>SHOW RADIO STATISTICS .....</b>	<b>36</b>
NUMBER OF DISCONNECTS.....	36
ANTENNA REFLECTED POWER .....	36

TRANSMIT CURRENT (MA) .....	36
AVERAGE NOISE LEVEL .....	37
AVERAGE SIGNAL LEVEL .....	37
OVERALL RCV RATE (%) .....	37
RADIO TEMPERATURE .....	37
<b>MULTIPOINT PARAMETERS .....</b>	<b>38</b>
EDIT MULTIPOINT PARAMETERS .....	38
(0) <i>Number Repeaters</i> .....	38
(1) <i>Master Packet Repeat</i> .....	38
Master Packet Repeat in MultiPoint Networks with Repeaters .....	39
(2) <i>Max Slave Retry</i> .....	39
(3) <i>Retry Odds</i> .....	39
(4) <i>DTR Connect</i> .....	39
(5) <i>Repeater Frequency</i> .....	40
(6) <i>Network ID</i> .....	40
(8) <i>MultiMaster Synch</i> .....	40
(9) <i>1 PPS Enable/Delay</i> .....	40
(A) <i>Slave/Repeater</i> .....	41
(B) <i>Diagnostics</i> .....	41
(C) <i>Subnet ID</i> .....	41
(D) <i>Radio ID</i> .....	42
(E) <i>Local Mode</i> .....	42
<b>OVERLAPPING MULTIPOINT NETWORKS .....</b>	<b>43</b>
<b>PASSWORDS .....</b>	<b>44</b>
SETTING A PASSWORD .....	44
<i>Changing a Password</i> .....	44
<i>Disabling a Password</i> .....	44
<b>TIME DIVISIBLE MULTIPLE ACCESS (TDMA) .....</b>	<b>45</b>
<b>ADDITIONAL SETTINGS .....</b>	<b>46</b>
LOW BAUD RATES .....	46
SETUP TIMEOUT .....	46
<b>FACTORY DEFAULT SETTINGS .....</b>	<b>47</b>
<b>EXAMPLES OF DATA COMMUNICATION LINKS .....</b>	<b>48</b>
<b>ADDITIONAL TRANSCEIVER INFORMATION .....</b>	<b>51</b>
BOARD LEVEL PINOUT .....	51
<b>MM2-T-U AND MM2-LV-T-U 900 MHZ TRANSCEIVER SPECIFICATIONS .....</b>	<b>52</b>
<b>MM2-T-U AND MM2-LV-T-U 900 MHZ TRANSCEIVER SPECIFICATIONS .....</b>	<b>54</b>
<b>MECHANICAL DRAWING .....</b>	<b>56</b>
<b>FREEWAVE TECHNICAL SUPPORT .....</b>	<b>57</b>
<b>ERRATA .....</b>	<b>58</b>

## About FreeWave Transceivers



FreeWave transceivers operate in virtually any environment where data communications occur.

### OEM / Engineering Notification

Programming the MM2 is accomplished through a text menu system that can be used with Windows HyperTerminal or similar terminal emulator. FreeWave Technologies, Inc also offers FreeWave Tool Suite which is a graphical software application that can program the MM2 and also read diagnostic data from the MM2. Tool Suite is available for download from the FreeWave website. Please contact FreeWave customer support to set up an account.

For OEMs and engineering firms that want to integrate the MM2 into their product, the above approach can be used for programming the MM2. In addition to this approach, FreeWave Technologies, Inc also offers a more “machine friendly” method that allows specific commands to be sent directly to the FreeWave MM2 without using the menu system. The user will need certain information to accomplish this. This information is available from FreeWave Technologies, Inc electronically. FreeWave Technologies, Inc does require an NDA (Non Disclosure Agreement) to be signed prior to providing this information. Please contact your FreeWave representative for further details on obtaining this information.

## Choosing Point-to-Point or Point-to-MultiPoint Operation

A Point-to-Point network is limited to one Master and one Slave transceiver. Up to 4 Repeaters may be added to extend the reach of the network, but no other Master or Slave may be added.

In a Point-to-MultiPoint network (also referred to as MultiPoint network) the transceiver, designated as a Master, is able to simultaneously communicate with numerous Slaves. In its simplest form, a MultiPoint network functions with the Master broadcasting its messages to all Slaves and the Slaves responding to the Master when given data by the device connected to the data port.

It is important to note the differences between Point-to-Point and MultiPoint networks. In a Point-to-Point network all packets are acknowledged, whether sent from the Master to the Slave or from the Slave to the Master. In a MultiPoint network, outbound packets from the Master or Repeater to Slaves or other Repeaters are sent a set number of times determined by the user. The receiving transceiver, Slave or Repeater, will accept the first packet received that passes the 32 bit CRC. However, the packet is not acknowledged. On the return trip to the Master, all packets sent are acknowledged or retransmitted until they are acknowledged. Therefore, the return link in a MultiPoint network is generally very robust.

Traditionally, a MultiPoint network is used in applications where data is collected from many instruments and reported back to one central site. As such, the architecture of such a network is different from Point-to-Point applications. The number of radios in a MultiPoint network is influenced by the following parameters:

1. Size of the blocks of data. The longer the data blocks, the smaller the network capacity.
2. Baud rate.
3. The amount of contention between Slaves. Polled Slaves vs. timed Slaves.
4. Use of Repeaters. Using the Repeater setting in a MultiPoint network will decrease overall network capacity by 50%.

For example, if the network will be polling Slaves once a day to retrieve sparse data, several hundred Slaves could be configured to a single Master. However, if each Slave will be transmitting data at greater levels, then fewer Slaves should be linked to the Master. The overall network will be closer to capacity with fewer Slaves.

**For examples and additional information on data communication links, see the section Examples of Data Communication Links later in this document.**

## Quick Start on a Point-to-MultiPoint Network

The following is a quick start guide for setting up two transceivers in Point-to-MultiPoint mode. This mode allows for a Master to communicate with several Repeaters and Slaves simultaneously.

- For board level configuration, connect the transceiver to a TTL to RS232 converter then connect to the serial port of a computer either through the data pins or diagnostics pins. Make sure to connect the radio to a power source (3.3 VDC for Model #MM2-LV-T, and 5.0 VDC for Model #MM2-T).
    - An evaluation interface is available for Model #MM2-T. This will allow the user to directly connect to an RS232 serial port and use the standard +12VDC power supply. A Diagnostic port is accessible as well using FreeWave diagnostic cable #ASC0409DC
  - Open up a Hyper Terminal session.
    - Use the following settings in connecting with hyper terminal
    - Connect to COMx (where 'x' is the number of the com port being connected to)
    - Set data rate to **19,200**, data bits - **8**, Parity- **none**, Stop bits – **1**, Flow control – **none**.
  - To put the unit into setup mode, press the **Setup** button on the evaluation interface or short pin 2 to ground. If using the diagnostics port, press *Shift-U* (capital U).
    - The three LED's on the board should all turn green, indicating Setup mode.
    - The main menu will appear on the screen.
  - Press **0** to get into the Operation Mode menu.
    - Press **2** to set the radio as a point to **MultiPoint Master**.
    - OR, Press **3** to set the radio as a point to **MultiPoint Slave**.
    - Press **Esc** to get back to Main menu.
  - Press **1** in the main menu to change the Baud Rate.
    - The baud rate must be changed to match the baud rate of the device that the radio is to be attached to.
    - Press **Esc** to get back to Main menu.
  - At the Main Menu, press **3**.
    - Set FreqKey, Max Packet Size, Min Packet Size, RF Data rate identical on all radios in the network.
- Note:** Changing these values may help to eliminate interference from other FreeWave networks.
- Press **Esc** to get back to Main menu.
- At the Main Menu, press **5**.
    - Set the Network ID value to any value between 1 and 4095, except 255.
    - Make sure this value is the same on every radio in the network.

### Point-to-MultiPoint Operation LED's.

Condition	Master			Slave			Repeater		
	Carrier Detect (CD)	Transmit (TX)	Clear to Send (CTS)	Carrier Detect (CD)	Transmit (TX)	Clear to Send (CTS)	Carrier Detect (CD)	Transmit (TX)	Clear to Send (CTS)
Powered, not linked	Solid red bright	Solid red dim	Off	Solid red bright	Off	Blinking red	Solid red bright	Off	Blinking red
Repeater and Slave linked to Master, no data	Solid red bright	Solid red dim	Off	Solid green	Off	* Solid red bright	Solid green	Solid red dim	* Solid red bright
Repeater and Slave linked to Master, Master sending data to Slave	Solid red bright	Solid red dim	Off	Solid green	Off	* Solid red bright	Solid green	Solid red dim	* Solid red bright
Repeater and Slave linked to Master, Slave sending data to Master	Solid green RCV data or Solid red bright	Solid red dim	Intermittent flash red	Solid green	Intermittent flash red	* Solid red bright	Solid green	Solid red bright	* Solid red bright
Master with diagnostics program running	Solid red bright	Solid red dim	Intermittent flash red	Solid green	Intermittent flash red	* Solid red bright	Solid green	Solid red bright	* Solid red bright

\* Clear to Send LED will be solid red with a solid link, as the link weakens the Clear to Send LED on the Repeater or Slave will begin to flash.

## Quick Start on a Point-to-Point Network

When purchased as a pair, the FreeWave® Wireless Data Transceivers are shipped from the factory pre-configured with most of the settings to operate in Point-to-Point applications. To establish communications between a pair of FreeWave Wireless Data Transceivers just received from the factory:

1. Connect the transceiver to the instrument with the TTL to RS232 converter and also attach power.
2. Set the Modem mode in each transceiver. One should be set as a Point-to-Point Master (Mode 0) and the other set as a Point-to-Point Slave (Mode 1).
3. Set the baud rate on each transceiver to match the baud rate of the instrument to which it is attached. Please note, when setting the transceiver's baud rate, its TTL data rate is set. The baud rate does not have to be on the same setting for the two transceivers.
4. Edit the Call Book. Enter the Slave serial number in the Master's Call Book. Enter the Master's Serial number in the Slave's Call Book, or disable Slave Security (in the Slave).
5. Connect antennas to the transceiver. Any FreeWave transceiver may be operated without an antenna for bench-top testing without concern for damaging the product. Noise potential may be reduced on the bench by lowering the Xmit power.
6. Shortly after both transceivers are plugged in, they should establish a communications link with each other and the connection is complete. Using the table below, verify that the radios are operating as expected.

### Point-to-Point Operation LED's

Condition	Master			Slave			Repeater		
	Carrier Detect (CD)	Transmit (TX)	Clear to Send (CTS)	Carrier Detect (CD)	Transmit (TX)	Clear to Send (CTS)	Carrier Detect (CD)	Transmit (TX)	Clear to Send (CTS)
Powered, no link	Solid red bright	Solid red bright	Solid red bright	Solid red bright	Off	Blinking red	Solid red bright	Off	Blinking red
Linked, no Repeater, sending sparse data	Solid green	Intermittent flash red	Intermittent flash red	Solid green	Intermittent flash red	Intermittent flash red	n/a	n/a	n/a
Master calling Slave through Repeater	Solid red bright	Solid red dim	Solid red bright	Solid red bright	Off	Blinking red	Solid red bright	Off	Blinking red
Master linked to Repeater, not to Slave	Flashing orange	Solid red dim	Solid red bright	Solid red bright	Off	Blinking red	Solid red bright	Solid red dim	Solid red bright
Repeater linked to Slave	Solid green	Intermittent flash red	Intermittent flash red	Solid green	Intermittent flash red	Intermittent flash red	Solid green	Intermittent flash red	Intermittent flash red
Mode 6 - waiting for ATD command	Solid red bright	Off	Blinking red	Solid red bright	Off	Blinking red	n/a	n/a	n/a
Setup Mode	Solid green	Solid green	Solid green	Solid green	Solid green	Solid green	Solid green	Solid green	Solid green

## Choosing a Location for the Transceivers

Placement of the FreeWave transceiver is likely to have a significant impact on its performance. The key to the overall robustness of the radio link is the height of the antenna. In general, FreeWave units with a higher antenna placement will have a better communication link. In practice, the transceiver should be placed away from computers, telephones, answering machines and other similar equipment. To improve the data link, FreeWave Technologies offers directional and Omni directional antennas with cable lengths ranging from 13 inches up to 200 feet. When using an external antenna, placement of that antenna is critical to a solid data link. Other antennas in close proximity are a potential source of interference; use the Radio Statistics to help identify potential problems. The Show Radio Statistics page is found in option 4 in the Main Menu. An adjustment as little as 2 feet in antenna placement can resolve some noise problems. In extreme cases, such as when interference is due to a Pager or Cellular Telephone tower, the band pass filters that FreeWave offers, may reduce this out-of-band noise.

## Setting up the Transceiver using HyperTerminal

**Note:** The terms Modem and Transceiver are used interchangeably in this manual and in the text of the Setup menu. While the words have different meanings, the two terms should be treated as one and the same when referring to FreeWave products.

Once the transceiver is powered and connected with the programming cable to the programming computer, it may be programmed for use through HyperTerminal or EZConfig. (NOTE: the MM2 will not work with EZConfig. It will work with the FreeWave Tools Suite configuration utility)

The following describes how to set HyperTerminal to program the transceivers.

### Accessing HyperTerminal's Setup Menu

**Note:** The following screen shots are taken from a computer using Windows XP. The display may vary slightly if using different operating systems.

1. Click on the **Start** button. A cascading menu appears. Select **Programs**, **Accessories**, **Communications** and then **HyperTerminal**. A window appears similar to the following:




2. Double-click on the **Hypertrm.exe** icon. The following window appears.



3. In the Name text box, type in a descriptive name. Select an icon from the Icon selection box.
4. Click on the **OK** button. The following “Connect To” dialog box appears:




5. Select the connection type to be used from the **Connect using** drop-down menu. In most cases the connection type will be either **Direct to Com1** or **Direct to Com2**.
6. Click on the **OK** button. The Properties dialog box appears for the selected connection type.

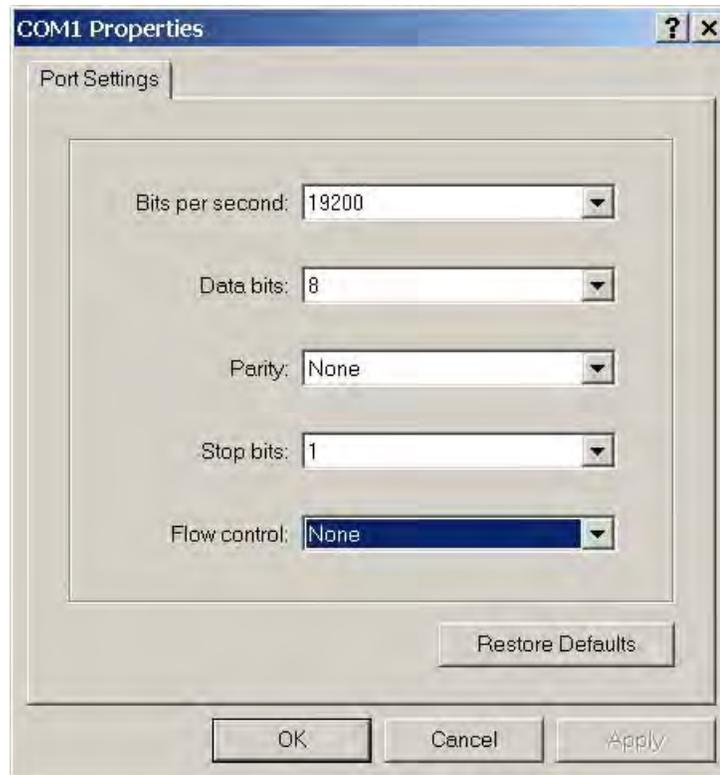

The following are the port settings which must be set for a proper connection:


Port Setting	Menu Option to Select
Bits per second	19200
Data bits	8
Parity	None
Stop bits	1
Flow control	None

- After selecting the appropriate menu items for each setting, click on the **OK** button. The following HyperTerminal dialog box appears:

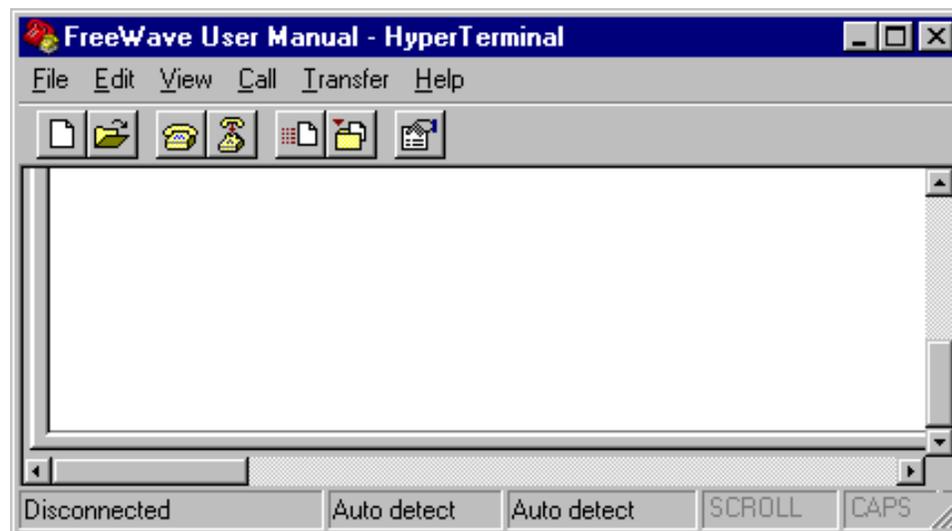

8. To put the radio into setup mode, short pin 2 to ground. If connected to the diagnostics port, type **U** (Capital 'U') to invoke the Setup menu.

When Setup is invoked, the FreeWave Setup **Main Menu** will display in the HyperTerminal dialog box. All three LED's on the transceiver will turn green ■ ■ ■ and stay green as long as the transceiver is in the Setup mode.

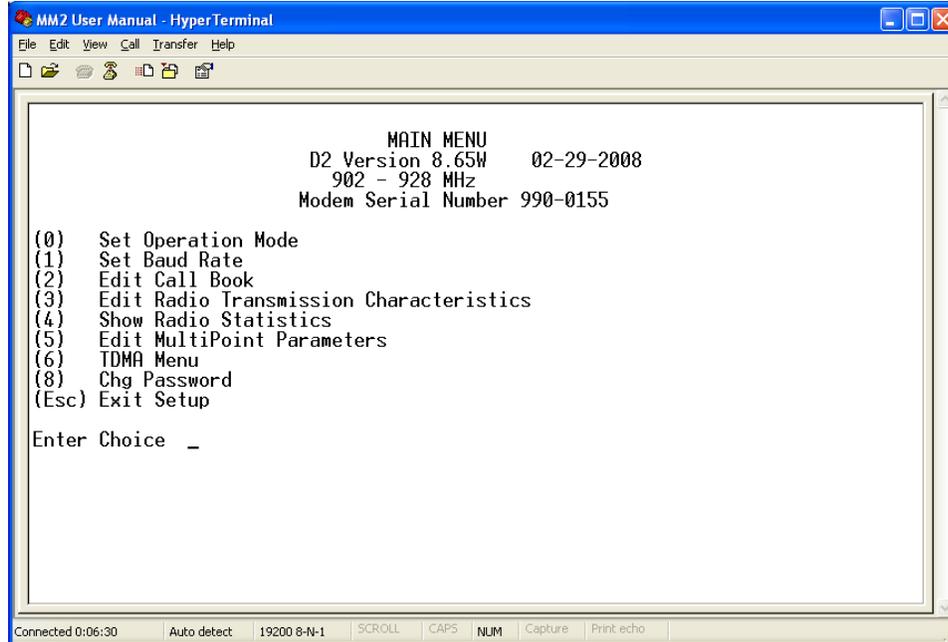

9. Save the HyperTerminal connection settings by selecting **Save** from the File menu.

**IMPORTANT NOTE:** Whenever a change is made to the **HyperTerminal settings** in an open terminal session, the connection must be disconnected then reconnected before the settings will take effect.

## Connecting and Disconnecting from HyperTerminal

The HyperTerminal dialog box displays several icons in the toolbar. To reconnect to HyperTerminal, click on the

Disconnect  icon, and then click on the Call  icon to reconnect. If the settings have not been saved they must be reselected when HyperTerminal reconnects to the transceiver.

## Troubleshooting HyperTerminal

The following are some common issues encountered while using HyperTerminal.

**1. Nothing appears on the screen after pressing the Setup button on the transceiver.**

This usually indicates one of two things; either the wrong Com port is selected or a null modem cable is being used. Follow the steps below to change the Com ports.

1. Click on the **Disconnect** button.
2. Select **Properties** from the File menu.
3. Click on the **Connect To** tab and verify that the correct Com port is selected.
4. Click on the **OK** button to close the Properties dialog box.
5. Click on the **Call** button.
6. Return the transceiver to Setup mode. The Setup menu screen should appear.

**2. Gibberish appears on the screen after pressing the Setup button.**

This usually indicates a Baud Rate problem. Follow the steps below to change the Baud Rate. The problem may also be that the transceiver under test is TTL and NOT RS-232, make sure the TTL from the MM2 is being converted to RS232. Gibberish BEFORE the Setup button is pressed indicates Diagnostics is enabled.

1. Click on the **Disconnect** button.
2. Select **Properties** from the File menu.
3. Click on the **Configure** button.
4. Change the Baud Rate to **19200** and click on the **OK** button.
5. Click on the **OK** button to close the Properties dialog box.
6. Click on the **Call** button.
7. Return the transceiver to Setup mode. The Setup menu screen should appear.

**3. The Setup menu appears on the screen, but nothing happens when keys on the keyboard are pressed.**

This usually indicates a three-wire connection, Rx, Tx & Gnd. Follow the steps below if the connection uses a three-wire connection.

1. Click on the **Disconnect** button.
2. Select **Properties** from the File menu.
3. Click on the **Configure** button.
4. Change the Flow Control to **None** and click on the **OK** button.
5. Click on the **OK** button to close the Properties dialog box.
6. Click on the **Call** button.
7. Return the transceiver to Setup mode. The Setup menu screen should appear.

**4. A connection exists, data is being received through HyperTerminal, and some data is correct, but the remaining data is in unrecognizable characters.**

This usually indicates a parity mismatch. To resolve this issue, ensure that the parity of the transceiver and the parity of HyperTerminal are set the same. HyperTerminal's parity settings are under Properties and the FreeWave parity is found under the Baud Rate in the Setup mode.


1. Click on the **Disconnect** button.
2. Select **Properties** from the File menu.
3. Click on the **Configure** button.
4. Change the Parity to **None** and click on the **OK** button.
5. Click on the **OK** button to close the Properties dialog box.
6. Click on the **Call** button.

Return the transceiver to Setup mode. The Setup menu screen should appear.

For additional troubleshooting for HyperTerminal, call FreeWave Technical Support at (303) 381 9200.

## Setting up a Transceiver

**Note:** Once Setup mode has been invoked in HyperTerminal, the process of exiting Setup mode involves pressing the Escape (Esc) key several times, allowing the transceiver to connect to the network. Otherwise, cycling the power is the alternative way to exit Setup mode.

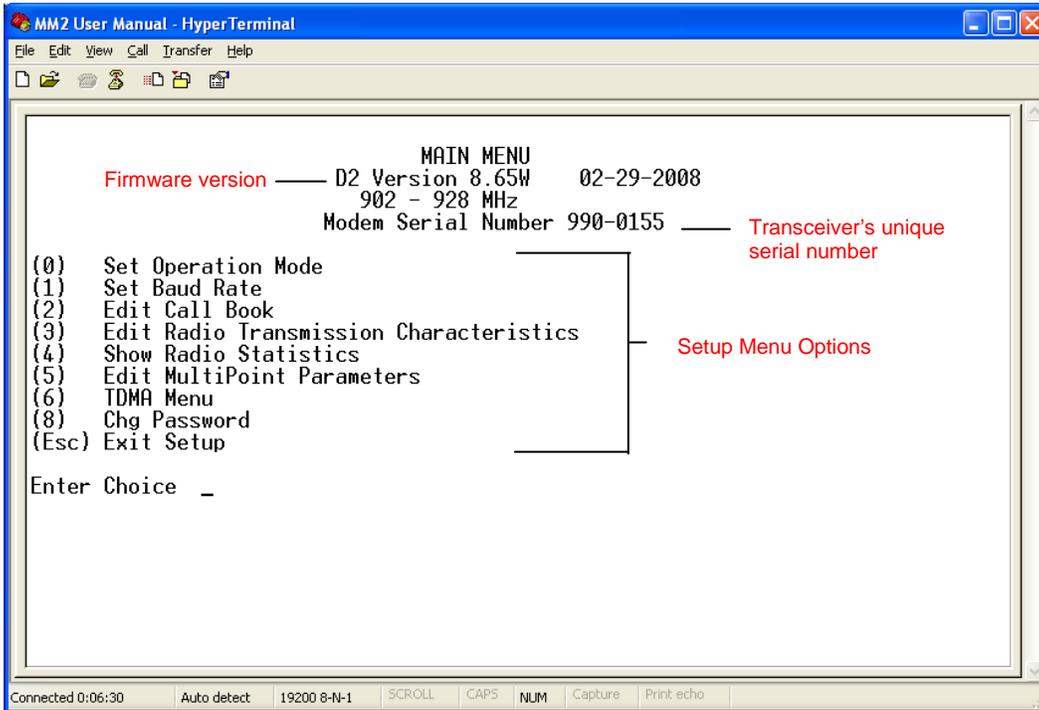

The following section describes in detail how to use all of the Setup menu options to edit the operational parameters and view the performance data.

## Operation Mode

The Operation Mode option designates the method FreeWave transceivers use to communicate with each other. FreeWave transceivers operate in a Master to Slave configuration. Before the transceivers can operate together, they must be set up to properly communicate.

In a Point-to-Point configuration, Master or Slave Mode may be used on either end of the communication link without performance degradation. When setting up the transceiver, remember that a number of parameters are controlled by the settings in the Master. Therefore, deploying the Master on the communications end where it will be easier to access is advised, but not necessary.

Operation Mode	Description
<b>Point-to-Point Master (0)</b>	This mode designates the transceiver as the Master in Point-to-Point mode. The Master may call any or all Slaves designated in its Call Book.  In Point-to-Point mode the Master determines the setting used for most of the radio transmission characteristics, regardless of the settings in the Slave and/or Repeaters. The settings not determined by the Master are: RF Xmit Power, Slave Security, Retry Time Out, and the Hop Table settings.
<b>Point-to-Point Slave (1)</b>	This mode designates the transceiver as a Slave in Point-to-Point mode. The Slave communicates with any Master in its Call Book—either directly or through up to four Repeaters.  When functioning as a Slave, the <b>Entry to Call</b> feature in the transceiver's Call Book is not operational. The Call Book may be bypassed in the Slave by setting Slave Security to 1. See the Slave Security section later in this manual.
<b>Point-to-MultiPoint Master (2)</b>	This mode designates the transceiver as a Master in MultiPoint mode. This mode allows one Master transceiver to communicate simultaneously with numerous Slaves and Repeaters.  A Point-to-MultiPoint Master communicates only with other transceivers designated as Point-to-MultiPoint Slaves or Point-to-MultiPoint Repeaters.
<b>Point-to-MultiPoint Slave (3)</b>	This mode designates the transceiver as a Slave in MultiPoint mode. This mode allows the Slave to communicate with a MultiPoint Master. The Slave may communicate with its Master through one or more Repeaters.
<b>Point-to-Point Slave/Repeater (4)</b>	This mode designates the transceiver to act as <i>either</i> a Slave or Repeater—depending on the instructions from the Master. The transceiver cannot act as both a Slave and a Repeater at the same time. True Slave/Repeater functionality is <b>only</b> available in a MultiPoint mode.  <b>Note:</b> Repeaters have no security features. When a transceiver is designated a Point-to-Point Slave/Repeater, any Master may use it as a Repeater.
<b>Point-to-Point Repeater (5)</b>	FreeWave allows the use of up to four Repeaters in a Point-to-Point communications link, significantly extending the operating range. When designated as a Repeater, a transceiver behaves as a pass-through link. All settings for the call book, baud rates and radio transmission characteristics are disabled. A Repeater will connect with any Master that calls it. The Repeater must be set up properly in the Master's call book.
<b>Point-to-Point Slave/Master Switchable (6)</b>	Mode 6 allows the transceiver to be controlled entirely through software commands. A number of key parameters in FreeWave's user interface may be changed either directly with a program such as Windows Terminal or through the use of script files. Additionally, when the Point-to-Point Slave/Master Switchable option is selected and the transceiver is not calling a Slave, it will function as a Slave and accept any appropriate calls from other transceivers. <b>Please check the Application Note on Mode 6 for more information</b>

Continued on next page

<b>Point-to-MultiPoint Repeater (7)</b>	This option allows the transceiver to operate as a Repeater in a MultiPoint network. See the MultiPoint parameters section for details on enabling MultiPoint Slave/Repeater mode.
<b>Mirrorbit Master(A)</b>	See FreeWave Application note LAN5424xx for information on Mirrored Bit Communication
<b>Mirrorbit Slave (B)</b>	See FreeWave Application note LAN5424xx for information on Mirrored Bit Communication
<b>Ethernet Options (F)</b>	This menu is only needed for Ethernet transceivers. Although this menu is included here, it is unrelated to the transceiver's Mode. Please see the Ethernet addendum for more information on this menu.

## Set Operation Mode

1. Selecting **0** Set Operation Mode from the Main Menu displays the following window:

```

MM2 User Manual - HyperTerminal
File Edit View Call Transfer Help
(4) Show Radio Statistics
(5) Edit MultiPoint Parameters
(6) TDMA Menu
(8) Chg Password
(Esc) Exit Setup
Enter Choice
                                SET MODEM MODE
                                Modem Mode is 2
(0) Point to Point Master
(1) Point to Point Slave
(2) Point to MultiPoint Master
(3) Point to MultiPoint Slave
(4) Point to Point Slave/Repeater
(5) Point to Point Repeater
(6) Point to Point Slave/Master Switchable
(7) Point to MultiPoint Repeater
(A) Mirrorbit Master
(B) Mirrorbit Slave
(F) Ethernet Options
(Esc) Exit to Main Menu
Enter Choice
Connected 2:09:02 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo

```


2. Select the appropriate operation mode by typing the associated number or letter after **Enter Choice**.
3. When the selection is accepted, the Set Modem Mode menu will refresh and display the updated mode.
4. Press the **Esc** key once to return to the Main Menu.

## Baud Rate

This setting is the communication rate between the transceiver and the instrument to which it is connected. It is important to note that this is independent of the baud rate for the other transceiver(s) in the network. For example, a pair of transceivers may be used in an application to send data from remote process instrumentation to an engineer's computer. In this application, the baud rate for the transceiver on the instrumentation might be set to 9600, and the transceiver on the engineer's computer might be set to 57,600.

## Set Baud Rate

1. Selecting 1 Set Baud Rate from the Main Menu displays the following window.

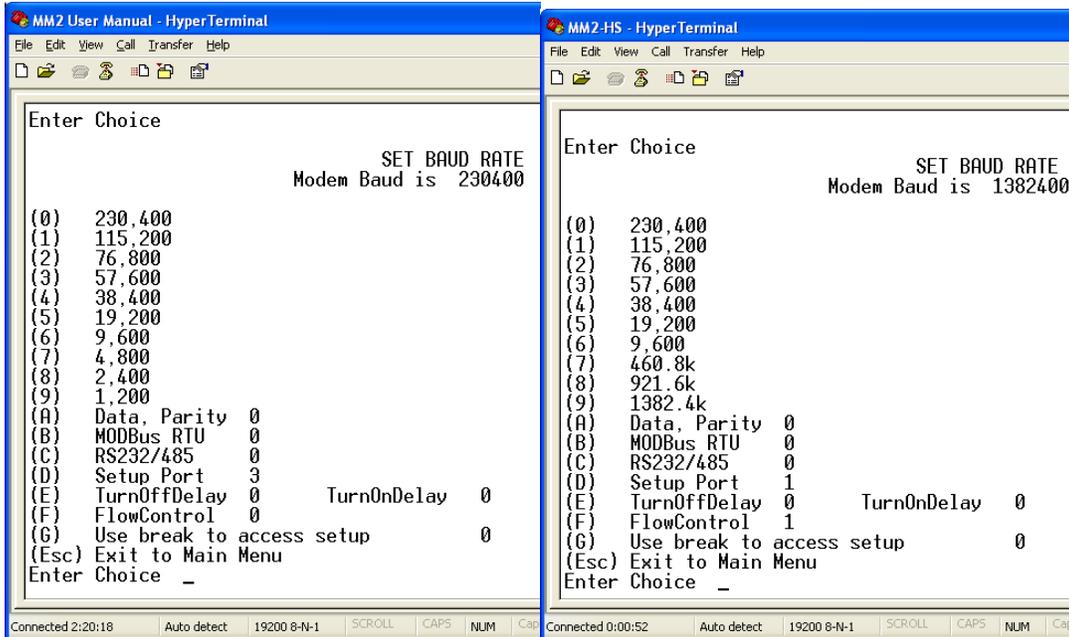

*MM2*

*MM2-HS*

2. Select the appropriate baud rate or option by typing in the associated number or letter after **Enter Choice**. As this is the baud rate for the data port, it must match the baud rate of the device attached to the transceiver.
3. When the selection is accepted, the Set Baud Rate menu will refresh and display the updated mode.
4. Press the **Esc** key to return to the main Setup menu.

**Note:** The Setup Baud Rate will ALWAYS default to 19,200 Baud no matter what the data port Baud Rate is set to (with the above noted exception).

Menu Option	Description																												
Actual Baud Rate (selections 0-9)	The actual baud rate for the transceiver's data port. It is desirable to set the baud rate to the highest level supported by the device to which it is connected. In certain circumstances, however, this may actually result in slower data communications.																												
<b>Data, Parity (A)</b>	Six data word length and parity configurations are available to be used with FreeWave transceivers. The default setting is <b>0</b> (8, N, 1) and is the most commonly used serial communications protocol. When <b>Data, Parity</b> are selected from the Baud Rate menu, a prompt to enter a value for <b>Data, Parity</b> displays. The following describes each option: <table border="1" data-bbox="451 562 1205 768"> <thead> <tr> <th>Menu Setting</th> <th>Data Bits</th> <th>Parity</th> <th>Stop Bits</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>8</td> <td>None</td> <td>1</td> </tr> <tr> <td>1</td> <td>7</td> <td>Even</td> <td>1</td> </tr> <tr> <td>2</td> <td>7</td> <td>Odd</td> <td>1</td> </tr> <tr> <td>3</td> <td>8</td> <td>None</td> <td>2</td> </tr> <tr> <td>4</td> <td>8</td> <td>Even</td> <td>1</td> </tr> <tr> <td>5</td> <td>8</td> <td>Odd</td> <td>1</td> </tr> </tbody> </table>	Menu Setting	Data Bits	Parity	Stop Bits	0	8	None	1	1	7	Even	1	2	7	Odd	1	3	8	None	2	4	8	Even	1	5	8	Odd	1
Menu Setting	Data Bits	Parity	Stop Bits																										
0	8	None	1																										
1	7	Even	1																										
2	7	Odd	1																										
3	8	None	2																										
4	8	Even	1																										
5	8	Odd	1																										
<b>Modbus RTU (B)</b>	Support for <b>Modbus RTU</b> protocol is available. The default setting for <b>Modbus RTU</b> is <b>0</b> (Not Enabled).  To enable the <b>Modbus RTU</b> mode:  1. In the <b>Set Baud Rate</b> menu enter <b>(B)</b> and then select <b>1</b>  <b>Note:</b> When using the transceiver in <b>Modbus RTU</b> mode, the Master Packet Repeat must match in every radio, regardless of whether the network is in Point-to-Point or MultiPoint mode.  Modbus RTU timing can be adjusted via this setting. See <b>Modbus RTU Timing</b> (below) for more information																												
<b>RS232/485 (C)</b>	Should be set to 0 for the MM2. RS232/485/422 is not supported in this radio. This radio is TTL only.																												
<b>Setup Port (D)</b>	Note: DO NOT change this setting unless the correct pinout is available for the new setting.  This setting determines which port, Main or Diagnostics, is used to enter the Setup Main Menu. <table border="1" data-bbox="548 1369 1354 1562"> <thead> <tr> <th>Menu</th> <th>Port</th> <th>Additional Information</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Main Only</td> <td>The terminal is connected to the Main Data Port.</td> </tr> <tr> <td>2</td> <td>Diagnostics Only</td> <td>The terminal is connected to the Diagnostic Port.</td> </tr> <tr> <td>3</td> <td>Both Ports</td> <td>The terminal may be connected to either port.</td> </tr> </tbody> </table> <p>The factory setting is based on the type of transceiver. A setting of "2" will be used with Ethernet products and Mirrored Bit products, a setting of "3" will be used otherwise. Setup mode is invoked by sending a "U" (Shift-U) to the Diagnostics port or by pressing/toggling the Set-up button/switch, if available. OEM boards may also enter Setup when Pin 2 is grounded. The Ethernet reset button will NOT put the unit into Setup mode. Ethernet transceivers must use the "U" option.</p> <p>Please see the pinout chart later in this manual for a description of the Data and Diagnostics ports.</p>	Menu	Port	Additional Information	1	Main Only	The terminal is connected to the Main Data Port.	2	Diagnostics Only	The terminal is connected to the Diagnostic Port.	3	Both Ports	The terminal may be connected to either port.																
Menu	Port	Additional Information																											
1	Main Only	The terminal is connected to the Main Data Port.																											
2	Diagnostics Only	The terminal is connected to the Diagnostic Port.																											
3	Both Ports	The terminal may be connected to either port.																											

<b>TurnOn Delay (E)</b>	TurnOnDelay- Sets the delay between when the line drivers are turned on and when the data leaves the data port. This setting can be adjusted for a 1-9mS delay.  TurnOff Delay Mode is not available on this device.															
<b>FlowControl (F)</b>	This menu specifies the hardware flow control for the Data port. The options for 0-3 are described below.  <table border="1" data-bbox="440 478 1443 747"> <thead> <tr> <th>Menu</th> <th>Port</th> <th>Additional Information</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>None</td> <td>Default - Uses software control (XON XOFF)</td> </tr> <tr> <td>1</td> <td>RTS</td> <td></td> </tr> <tr> <td>2</td> <td>DTR</td> <td></td> </tr> <tr> <td>3</td> <td>DOT</td> <td></td> </tr> </tbody> </table>	Menu	Port	Additional Information	0	None	Default - Uses software control (XON XOFF)	1	RTS		2	DTR		3	DOT	
Menu	Port	Additional Information														
0	None	Default - Uses software control (XON XOFF)														
1	RTS															
2	DTR															
3	DOT															

## Modbus RTU Timing

The Modbus RTU setting causes the radio to wait for an amount of time, “gathering” data before sending out the radio link.

With a setting of **0** (Disabled), the radio will send data out its radio link as soon as the data is received into the serial port.

With a setting of **1**, the radio will wait for a number of slots equal to 2 times the Master Packet Repeat setting before sending the received data out the radio link. For example, if **Master Packet Repeat = 3**, the radio will wait for 6 slots, gathering data up the whole time. At the end of the 6 slots, the radio will send all received data in one “burst”. This is the appropriate setting for most Modbus RTU devices.

With a setting of **2** and higher, the radio will wait for a number of slots calculated by the following formula:

$$(\text{Modbus RTU Setting} + \text{Master Packet Repeat Setting} + 1) \times 2$$

**For example, in a radio where the Modbus RTU setting = 2 and the Master Packet Repeat setting = 3, the radio will wait for (2+3+1) x 2, or 12 slots.**

## Call Book

The Call Book is required to be used in Point-to-Point networks. While the call book is an option in Point-to-MultiPoint networks, the Network ID feature is strongly recommended in most applications.

The instructions provided in this section are for Point-to-Point mode only. Use of the Call Book for MultiPoint networks is explained later in this chapter.

Using the Call Book offers both security and flexibility in determining how FreeWave transceivers communicate with each other.

Three settings must be made for two FreeWave transceivers to communicate in Point-to-Point mode:

1. The Master's serial number must be listed in the Slave's Call Book or Slave Security is turned off in the Slave.
2. The Slave's serial number must be listed in the Master's Call Book.


- The Master must be programmed to call the Slave.

The Call Book allows users to incorporate up to 10 FreeWave transceivers, designate 1 to 4 Repeaters to be used with each transceiver, and designate which Slave the Master will call. To set the **Entry to Call** option, enter **C** at the prompt, followed by the menu number corresponding to that Slave. To call any available Slave in the list, enter **C** then enter **A** to direct the Master to Call All.

**Note:** To call a Slave through one or more Repeaters, that Slave must be called individually. With Call All selected, the Master will not connect with any Slaves through Repeaters. The Master calls every Slave in the list and will connect with the first Slave that responds. When calling through a Repeater, the Master must first call that Repeater and establish a communication link with it prior to making contact with the Slave.

## Edit Call Book

- Selecting **2** Call Book from the Main Menu displays the following window:
- Select the appropriate number to edit by typing the associated line number at the cursor.
- Enter New Number** will appear. Enter the 7-digit serial number of the transceiver being called.
- The system will prompt for Repeater 1's number. If no Repeaters are being used, press the **Esc** key. (skip step 5) Otherwise, enter the 7-digit serial number of the Repeater.
- The system will then prompt for Repeater 2's number. Enter the 7-digit serial number of the second Repeater. If only one Repeater is being used, press the **Esc** key.
- The system refreshes the transceiver's Call Book menu with the new changes.
- Press the **Esc** key to return to the Main Menu.

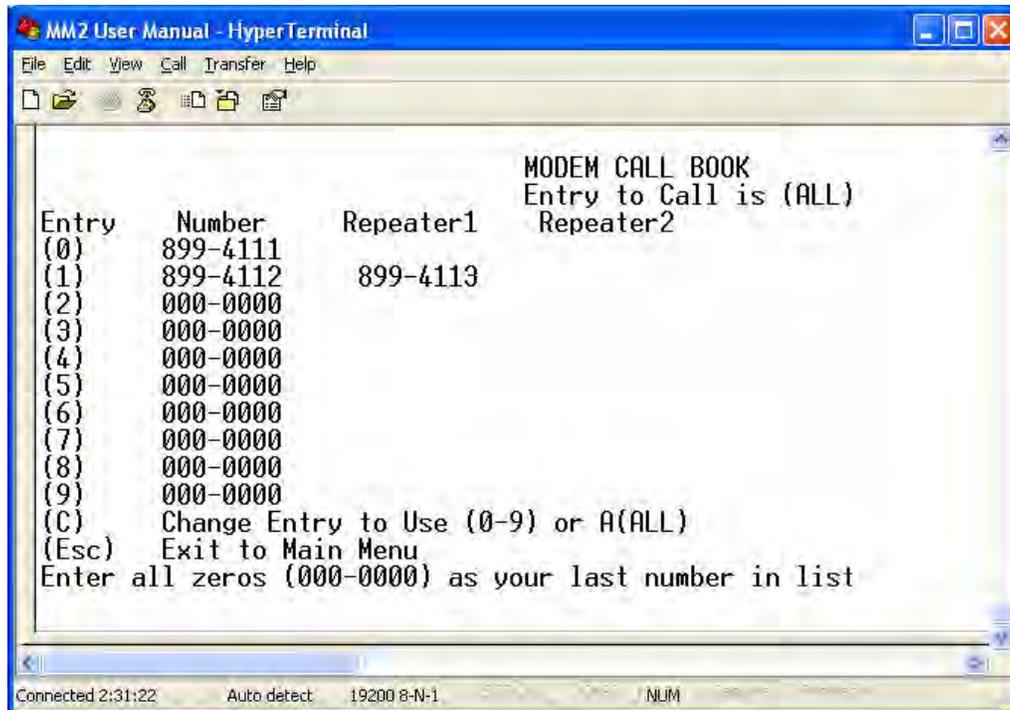


**Note:** When entering numbers into the Call Book, Repeaters need only be defined in the Master Call Book. The Slave Call Book only requires the Master's Serial number. A repeater need not have anything listed in its Call Book.

### PROGRAMMING POINT-TO-POINT EXTENDED CALL BOOK TO USE THREE OR FOUR REPEATERS

In a Point-to-Point configuration FreeWave transceivers can utilize up to 4 Repeaters. To use 3 or 4 Repeaters, program the Call Book with the Slave's serial number, followed by the first 2 Repeaters. On the next line enter 999-9999 as the transceiver to call. When prompted for the Repeaters enter the third and fourth Repeaters in the link.

The illustration below depicts a Point-to-Point link where a Slave is called through 4 Repeaters. In this example the Master is calling the Slave, 571-3872, through Repeater 1, 901-1234, then Repeater 2, 910-0234, then Repeater 3, 571-3456, and finally Repeater 4, 571-4567. Entering of serial number 999-9999 in line 1 instructs the Master to continue calling through the Repeaters programmed on that line.

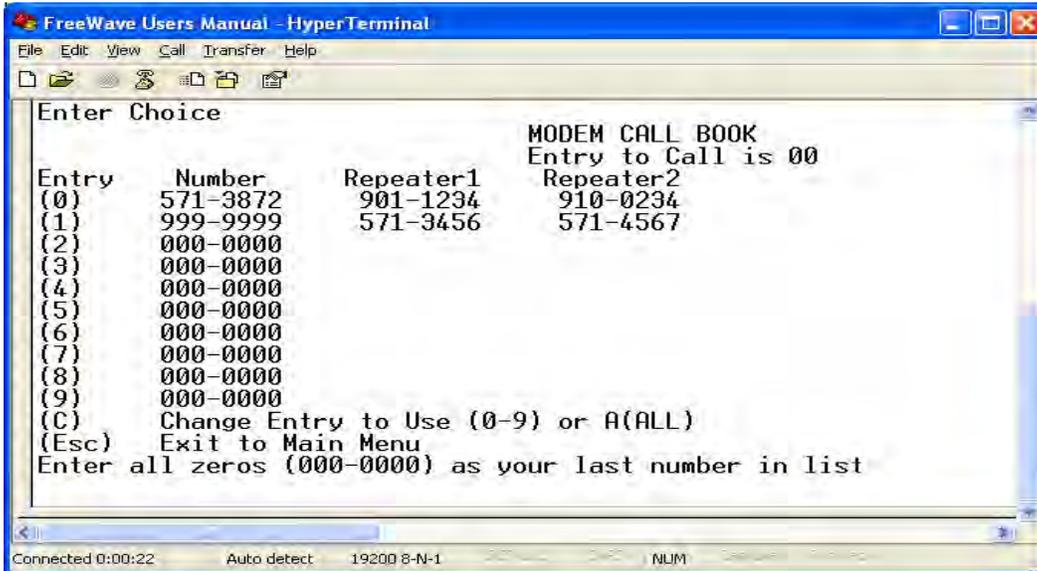

It is important that the Call Book slots (0-9) are filled sequentially starting with slot 0. When a Master is instructed to Call All, it will call all Slaves listed until it reaches the first serial number of 000-0000. If a serial number is entered after the all zero number or as a Repeater, it will not be recognized as a valid number by the Master.

### PROGRAMMING POINT-TO-MULTIPOINT CALL BOOK

In a MultiPoint network, the Slaves and Repeaters are not listed in the Master's Call Book. A Slave must have the Master and any Repeater it is going to use in its Call Book.

**Note:** If the Network ID feature is used in a MultiPoint network, no entries are needed in the Call Book of any of the transceivers. See the Network ID feature in the MultiPoint Parameters section.

The following example shows the Call Books of a MultiPoint network comprised of a Master, Repeater and Slave in which the Slave can communicate either through the Repeater or directly to the Master:

#### *MultiPoint Master Call Book (Unit Serial Number 555-0001)*

Entry	Number	Repeater1	Repeater2
(0)	000-0000		
(1)	000-0000		

No serial number entries are necessary in the Master's Call Book.

#### *MultiPoint Repeater Call Book (Unit Serial Number 555-0002)*

Entry	Number	Repeater1	Repeater2
(0)	555-0001		
(1)	000-0000		


#### *MultiPoint Slave Call Book (Unit Serial Number 555-0003).*

Entry	Number	Repeater1	Repeater2
(0)	555-0001		
(1)	555-0002		
(2)	000-0000		

At times it may be desirable to force a Slave to go through a specific MultiPoint Repeater. In this scenario, the Slave's Call Book should contain only the serial number for that Repeater as the entry on line 0.

### PROGRAMMING POINT-TO-MULTIPOINT EXTENDED CALL BOOK

In a MultiPoint network, a Slave can be programmed to roam between Masters and Repeaters using the MultiPoint Extended Call Book function. A Slave with its Call Book configured as below will communicate with any transceiver whose serial number appears in any of the three columns. This functionality is enabled by setting Network ID to 255 then in the Call Book 999-9999 as the last entry in the first and second columns, and **Entry to Call** to ALL.

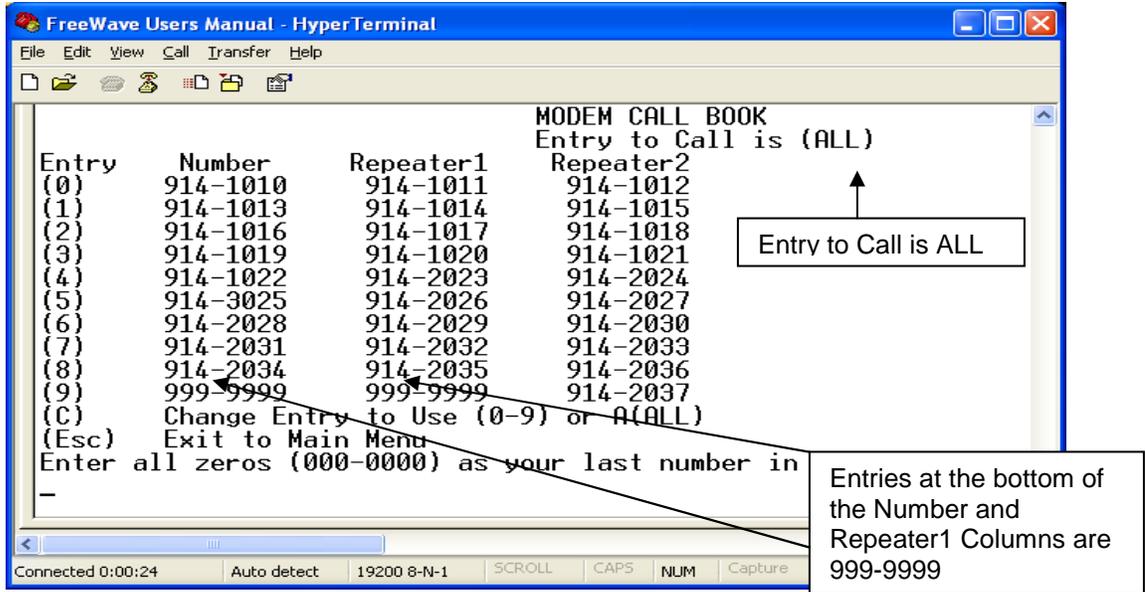

### Radio Transmission Characteristics


The Edit Radio Transmission Characteristics option allows the user to modify several different parameters in the transceiver. Many of these parameters must be maintained throughout the network for proper functionality.

**Note:** This menu is **only** for the sophisticated user who has a good understanding of the principles of radio data transmission.

The settings for the Slave(s) and Repeater(s) not determined by the Master are RF Xmit Power, Slave Security, Retry Time Out and Hop Table Size, Hop Table Version, and Hop Table Offset.

## Edit Radio Transmission Characteristics

Selecting **3** Edit Radio Transmission Characteristics from the Main Menu displays the following window:

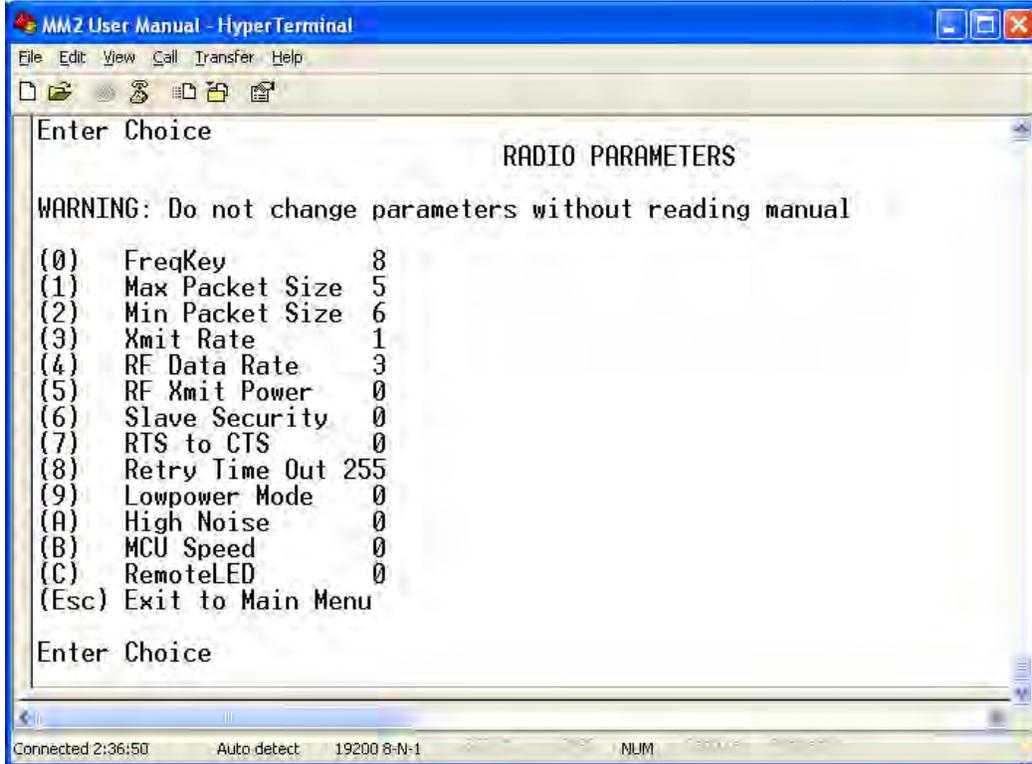


### FREQKEY IN 900 MHz TRANSCEIVERS

Selection **0** in the Radio Parameters menu allows the user to modify the hopping patterns of the transceiver. Fifteen choices are available for the FreqKey (0-9 and A-E) setting, representing 15 different pseudo-random hop patterns. This is to minimize the interference with other FreeWave transceivers operating in the area. For instance, if 10 pairs of FreeWave transceivers are operating on different networks in close proximity, setting a different FreqKey value reduces the chance that transceivers will hop to the same frequency at the same time. If two networks were to hop to the same frequency, the next hop would be to a different frequency for both networks.

Additional network separation can be gained by adjusting the Max and Min packet sizes, options 1 and 2.

After selecting **0** FreqKey, select **F** for additional options. The Hop Table Parameters will appear in the window. From this menu, more network differentiation can be defined by way of limiting the number and location of frequencies the transceivers may hop on in the 902-928 MHz band.

**Note:** ALL transceivers in a network must have identical Hop Table settings to function properly.

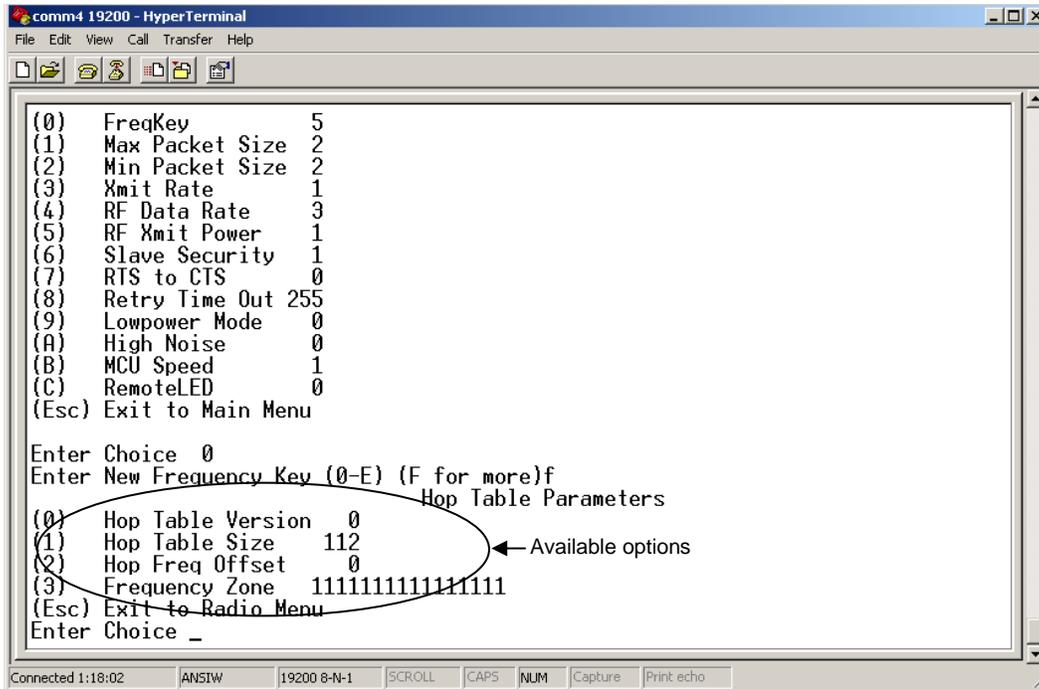

**(0) HOP TABLE VERSION**

Entry 0 allows the user to choose the portion of the band in which the transceiver will operate.

Selection	Band
0	Full 902-928 MHz
1	915-928 MHz
2	902-928 MHz, 16 fewer frequencies than full U.S. set
3	916-920 MHz
4	921-928 MHz
5	Uses 902-928 MHz with center frequencies of 911-919 MHz notched out
6	902-915 MHz

**Note:** Do not use FreqKey 14 (E) with the 915-928 MHz (setting 1), 916-920 MHz (setting 3), and 921-928 (setting 4) hop tables.

**(1) HOP TABLE SIZE**

The Hop Table Size defines how many separate channels will be used by a given network. In the MM2-T radio, the Hop Table Size may be set from 50 to 112. In the MM2-HS-T radio, the Hop Table Size may be set from 1 to 40.

**(2) HOP FREQ OFFSET**

The Hop Freq Offset option is not functional in the 900 MHz spread spectrum transceiver.

**Note:** Regardless of the FreqKey used, all transceivers in either Point-to-Point or Point-to-MultiPoint networks must be set to identical Hop Tables Version, Hop Table Size and Hop Freq Offset.

**(3) FREQUENCY ZONE**

Frequency Zone: The idea of frequency zoning is to divide the available band (902MHz to 928 MHz) into smaller bands, in this case 16 smaller bands each consisting of 5, 7, and 8 Frequency channels depending on the frequency zone. These 16 Zones are stored in a Word, which is made up of 16 bits numbered 0-15. These bits when displayed LSB to MSB directly represent the zones that the radio will operate on from lowest frequency to highest. A value of '1' in the bit sequence will instruct the radio to operate within the represented band. Likewise, a '0' value will instruct the radio to bypass the represented band. This feature should only be used with the standard hop table.

The following table shows the Frequency Zones for the MM2-T-U and the MM2-LV-T-U:

Binary Zone Number (LSB First)	Beginning Freq. (MHz)	Ending Freq. (MHz)	Number Of Channels
0	902.2464	903.8592	8
1	904.0896	905.4720	7
2	905.7024	907.0848	7
3	907.3152	908.6976	7
4	908.9280	910.3104	7
5	910.5408	911.9232	7
6	912.1536	913.5360	7
7	913.7664	915.1488	7
8	915.3792	916.7616	7
9	916.9920	918.6048	8
10	918.8352	920.2176	7
11	920.4480	921.8304	7
12	922.0608	923.4432	7
13	923.6736	925.0560	7
14	925.2864	926.6688	7
15	926.8992	927.8208	5

The following table shows the Frequency Zones for the MM2-HS-T-U and the MM2-HS-LV-T-U:

Binary Zone Number (LSB First)	Beginning Freq. (MHz)	Ending Freq. (MHz)	Number Of Channels
0	902.5336	903.7824	3
1	904.3968	905.6256	3
2	906.2400	906.8544	2
3	907.4688	908.6976	3
4	909.3120	909.9264	2
5	910.5408	911.7696	3
6	912.3840	912.9984	2
7	913.6128	914.8416	3
8	915.4560	916.6848	3
9	917.2992	917.9136	2
10	918.5280	919.7568	3
11	920.3712	920.9856	2
12	921.6000	922.8288	3
13	923.4432	924.0576	2
14	924.6720	925.9008	3
15	926.5152	927.1296	2

Frequency Zones are activated through the Setup menu. To enable zoning from the main Setup menu of the radio:

1. Select Menu **3** "Edit Radio Transmission Characteristics"
2. Select Option **0** "FreqKey"
3. Select **F** "For More"
4. Select Option **3** "Frequency Zone"

Enter **1** to enable desired frequency zone and a **0** to disable desired frequency zone. Frequency Zone entries begin with 0 (LSB) and continue through 15 (MSB).

```

comm4 19200 - HyperTerminal
File Edit View Call Transfer Help
Enter New Frequency Key (0-E) (F for more)f
Hop Table Parameters
(0) Hop Table Version 0
(1) Hop Table Size 112
(2) Hop Freq Offset 0
(3) Frequency Zone 1111111111111111
(Esc) Exit to Radio Menu
Enter Choice 3
Enter 1 to allow Zone, 0 to not
Zone 1 1
Zone 2 1
Zone 3 0
Zone 4 1
Zone 5 0
Zone 6 0
Zone 7 1
Zone 8 1
Zone 9 1
Zone 10 1
Zone 11 1
Zone 12 1
Zone 13 1
Zone 14 1
Zone 15
Connected 1:21:33 ANSIW 19200 8-N-1 SCROLL CAPS NUM Capture Print echo

```

**WARNING:** In the MM2-T-U radio, FCC regulations require a minimum of 50 separate channels be used within a hop pattern. Use the above table to determine the number of frequency zones required for legal communication.

Please contact FreeWave Technical Support at (303) 381-9200 with questions.

**(1) MAX PACKET SIZE AND (2) MIN PACKET SIZE**

The Max and Min Packet Size settings and the RF Data Rate determine the number of bytes in the packets. Throughput can be enhanced when packet sizes are optimized. In Point-to-Point mode, the Max and Min Packet Settings will not have material impact on throughput unless maximum throughput is desired. However, this may have an impact on latency. For example, if small amounts of data are sent and large packet sizes are selected, a certain amount of time “wasted” between each packet would be seen.

The following 3 tables provide the information to determine optimum setting values.

The default settings for Max and Min packet size and RF Data Rate are 8, 9, and 3, respectively.

The following table defines the Minimum packet size in bytes by way of charting the Min Packet Size setting versus the RF Data Rate setting. Using the default settings, the actual minimum packet size, in bytes, is 44.

Minimum Packet Size Setting				
Min Setting	Min Packet Size RF Data Rate = 1 MM2-HS-T-U, MM2-HS-LV-T-U	Min Packet Size RF Data Rate = 2 MM2-HS-T-U, MM2-HS-LV-T-U	Min Packet Size RF Data Rate = 2 MM2-T-U, MM2-LV-T-U	Min Packet Size RF Data Rate = 3 All MM2 models
0	24	14	15	8
1	31	19	21	12
2	38	24	26	16
3	45	29	31	20
4	52	34	37	24
5	59	39	42	28
6	67	44	47	32
7	74	49	53	36
8	81	54	58	40
9	88	59	63	44

The following table defines the Maximum packet size in bytes by way of charting the Min Packet Size setting versus the Max Packet Size setting where the RF Data Rate is set to 2 in an MM2-T-U or MM2-LV-T-U radio.

Maximum Packet Size Definition with RF Date Rate of 2 for MM2-T-U, MM2-LV-T-U										
Min Setting	Max Setting									
	0	1	2	3	4	5	6	7	8	9
0	15	37	58	79	101	122	143	165	186	207
1	21	42	63	85	106	127	149	170	191	213
2	26	47	69	90	111	133	154	175	197	218
3	31	53	74	95	117	138	159	181	202	223
4	37	58	79	101	122	143	165	186	207	229
5	42	63	85	106	127	149	170	191	213	234
6	47	69	90	111	133	154	175	197	218	239
7	53	74	95	117	138	159	181	202	223	245
8	58	79	101	122	143	165	186	207	229	250
9	63	85	106	127	149	170	191	213	234	255

The following table defines the Maximum packet size in bytes by way of charting the Min Packet Size setting versus the Max Packet Size setting where the RF Data Rate is set to 3 for any MM2 radio (MM2-T-U, MM2-LV-T-U, MM2-HS-T-U, MM2-HS-LV-T-U). Using the default settings, the actual maximum packet size, in bytes, is 172.

Maximum Packet Size Definition with RF Date Rate of 3 for all MM2 models										
Min Setting	Max Setting									
	0	1	2	3	4	5	6	7	8	9
0	8	24	40	56	72	88	104	120	136	152
1	12	28	44	60	76	92	108	124	140	156
2	16	32	48	64	80	96	112	128	144	160
3	20	36	52	68	84	100	116	132	148	164
4	24	40	56	72	88	104	120	136	152	168
5	28	44	60	76	92	108	124	140	156	172
6	32	48	64	80	96	112	128	144	160	176
7	36	52	68	84	100	116	132	148	164	180
8	40	56	72	88	104	120	136	152	168	184
9	44	60	76	92	108	124	140	156	172	188

Referencing the default settings, the Master will transmit up to 172 bytes on every hop. If fewer than 172 bytes are transmitted, the balance is allocated to the Slave's transmission, plus the quantity in the Min Packet Size Setting.

For example, if a Master transmits 100 bytes, the Slave will then have a total of 116 bytes available (72("leftover bytes") + 44 (Min packet size)).

The following table defines the Maximum packet size in bytes by way of charting the Min Packet Size setting versus the Max Packet Size setting where the RF Data Rate is set to 2 in an MM2-HS-T-U or MM2-HS-LV-T-U radio.

Maximum Packet Size Definition with RF Date Rate of 2 for MM2-HS-T-U, MM2-HS-LV-T-U										
Min Setting	Max Setting									
	0	1	2	3	4	5	6	7	8	9
0	14	34	54	74	94	114	134	154	174	194
1	19	39	59	79	99	119	139	157	179	199
2	24	44	64	84	104	124	144	164	184	204
3	29	49	69	89	109	129	149	169	189	209
4	34	54	74	94	114	134	154	174	194	214
5	39	59	79	99	119	139	159	179	199	219
6	44	64	84	104	124	144	164	184	204	224
7	49	69	89	109	129	149	169	189	209	229
8	54	74	94	114	134	154	174	194	214	234
9	59	79	99	119	139	159	179	199	219	239

The following table defines the Maximum packet size in bytes by way of charting the Min Packet Size setting versus the Max Packet Size setting where the RF Data Rate is set to 1 in an MM2-HS-T-U or MM2-HS-LV-T-U radio.

Maximum Packet Size Definition with RF Data Rate of 1 for MM2-HS-T-U, MM2-HS-LV-T-U										
Min Setting	Max Setting									
	0	1	2	3	4	5	6	7	8	9
0	24	52	81	109	138	166	195	223	252	255
1	31	59	88	116	146	173	202	230	255	255
2	38	67	95	124	152	181	209	238	255	255
3	45	74	102	131	159	188	216	245	255	255
4	52	81	109	138	166	195	223	252	255	255
5	59	88	116	145	173	202	230	255	255	255
6	67	95	124	152	181	209	238	255	255	255
7	74	102	131	159	188	216	245	255	255	255
8	81	109	138	166	195	223	252	255	255	255
9	88	116	145	173	202	230	255	255	255	255

### (3) XMIT RATE

Two settings for the Transmit Rate parameter are available. The setting for normal operation of the transceiver is a Transmit Rate 1. Transmit Rate 0 is useful to qualitatively gauge signal strength in Point to Point mode. When set to Transmit Rate 0, the transceivers will transmit back and forth continuously regardless if they have any actual data. In Point-to-Point operation, Transmit Rate 0 should be used only as a diagnostic tool and not for normal operation. The strength of the signal may be gauged by the Clear to Send LED. A solid red CTS LED indicates a strong signal; a blinking CTS LED indicates a weaker signal.

### (4) RF DATA RATE

FreeWave transceivers have an adjustable RF Data Rate. RF Data Rate should not be confused with the serial port Baud Rate. In the MM2-T-U and MM2-LV-T-U, Setting 2 (RF Speed of 154kbps) should be used when the transceivers are close together and data throughput needs to be optimized. Setting 3 (RF Speed of 115.2kbps) should be used when the transceivers are farther away and a solid data link is preferred over data throughput. Similarly, in the MM2-HS-T-U and MM2-HS-LV-T-U, Setting 1 (RF speed of 1.2 Mbps) or 2 (RF Speed of 867 kbps) should be used to prioritize speed, and Setting 3 (RF Speed of 614 kbps) should be used to prioritize link quality.

**Note:** In MultiPoint networks, the RF Data Rate must be set identically in all transceivers. Any transceiver with an RF Data Rate different from the Master will not establish a link.

In Point to Point networks the Master's settings take precedence over the Slave.

RF Data Rate Setting	RF Speed for:	RF Speed for:
	MM2-T-U MM2-LV-T-U	MM2-HS-T-U MM2-HS-LV-T-U
1	N/A	1.2 Mbps
2	154 kbps	867 kbps
3	115.2 kbps	614 kbps

*RF Data Rate Speed Table*

**(5) RF XMIT POWER**

This option sets the transmit power of the radio. A setting of **10** is approximately 1W of output power in an MM2.

RF Xmit Power Setting	Power (in mW)
0	5
1	10
2	35
3	80
4	140
5	230
6	330
7	480
8	600
9	800
10	1000

**(6) SLAVE SECURITY**

Slave security is a feature that allows Slave transceivers to accept transmissions from a Master not included in the Call Book. The default setting is 0 (Slave Security enabled) which means, only a Master which is in the Slaves' Call Book may link to that Slave.

Slave Security may be disabled (setting of 1) allowing any Master to call the Slave. Slave Security has no effect in Point-to-MultiPoint networks where the Network ID is not set to 255.

Slave Security must be set to 1 when the unit is operating in Mode 6 Slave/Master switchable or a Point-to-Point network where the Slave may need to accept calls from more than 10 different Masters. When Slave Security is set to 1, the transceiver will accept calls from any other FreeWave transceiver. Additional network security measures may be taken to prevent unauthorized access, such as changing default settings for FreqKey, Hop Table or Frequency Zones.

**(7) RTS to CTS**

Menu selection RTS to CTS in the Radio Parameters menu provides the option of allowing the RTS line on the Master transceiver to control the CTS line of the Slave. This pass-through control can be enabled in both Point-to-Point and Point-to-MultiPoint. In MultiPoint networks, the Master RTS line will control all Slaves' CTS lines. When enabled, the CTS line ceases to function as flow control. It is not recommended to enable this feature when operating at Baud rates above 38.4kB.

The default setting of 0 disables this function, where as a setting of 1 enables RTS-CTS control.

RTS-CTS setting 2 is described in detail in the application note [#5437 DTR to CTS Line Alarm Feature](#).

With an RTS to CTS setting of 1, the Master senses the RTS line prior to all scheduled packet transmissions. If the state has changed, the Master will then transmit a message to the Slave with the new status. This transmission will occur regardless of data being sent. If data is ready to be sent, the RTS status message will be sent in addition to the data. In Point-to-Point mode, the Master will continue sending the new status message until it receives an acknowledgment from the Slave. In MultiPoint mode, the Master will repeat the message the number of times equal to the Master Packet Repeat value in the MultiPoint Parameters menu.

Master transmit times are completely asynchronous to the occurrence of any change of the RTS line; the latency time from RTS to CTS is variable. The Max and Min Packet Size parameters in the Radio Parameter menu determine this duration. Setting both parameters to their maximum value of 9 will produce a maximum latency time of approximately 21 ms, given no Repeaters in the network. At the minimum settings for Max and Min Packet Size (0), the time will be approximately 5.9ms. Please note that this latency can increase significantly if packets are lost between the Master and Slave. In Point-to-MultiPoint mode, no absolute guarantee is made that the state change will be communicated to all Slaves. In Multipoint networks with Repeaters present, the latency will be cumulative for each serial Repeater.

For example: If the latency between the Master and the first Repeater is 15 ms, and 2 serial Repeaters are present, the total latency will be 45 ms. (M—R1 (15 ms) + R1—R2 (15 ms) + R2—S (15 ms) = 45 ms)

**Note:** The RTS to CTS feature does not function in Point-to-Point networks that contain a Repeater. If this feature is needed in such network, the mode should be changed to Point-to-MultiPoint.

**Note:** If DTRConnect is enabled and set to 2, the RTS to CTS feature will not work.

**Note:** If the DTRConnect is enabled and set to 1, RTS to CTS mode takes precedence over the functionality of the CTS line on the Slave relating to the DTRConnect feature.

#### (8) RETRY TIME OUT

The Retry Time Out parameter in a Slave or Repeater sets the delay the unit will wait before dropping the connection to a Master or Repeater in MultiPoint mode. The factory default is set at the maximum of 255. The maximum setting means that if 1 packet in 255 is sent successfully from the Master to the Slave or Repeater, the link will be maintained. The minimum setting is 8. This allows a Slave or Repeater to drop a connection if less than 1 in 8 consecutive packets is successfully received from the Master.

On the other hand, the function in the Master is effectively the same. With a setting of 255, the Master will allow a Slave or Repeater to stay connected as long as 1 packet in 255 is successfully received at the Master.

The Retry Time Out parameter is useful when a MultiPoint network has a roving Master or Slave(s). As the link gets weaker, a lower setting will allow a poor link to break in search of a stronger one.

**Note:** Setting Retry Time Out to 20 is recommended in areas where several FreeWave networks exist. This setting will allow Slaves and Repeaters to drop the connection if the link becomes too weak, while at the same time prevent errant disconnects due to interference from neighboring networks.

While intended primarily for MultiPoint networks, the Retry Time Out parameter may also be modified in Point-to-Point networks. However, the value in Point-to-Point mode should not be set to less than 151.


**(9) LOWPOWER MODE**

The Lowpower Mode feature allows a MultiPoint Slave to consume less power. This is achieved primarily by dimming the transceiver's LED's. When set to 2 through 31, the transceiver will sleep between slots. For example, at a setting of 2 the transceiver sleeps 1 out of 2 slots; at a setting of 3 the transceiver sleeps 2 out of 3 slots, and so on.

The following table shows the changes at different Lowpower Mode settings. The actual current draw depends on many factors. The table below gives only a qualitative indication of supply current savings. A low number reduces latency and a high number reduces current consumption.

Setting	Description
0	Lowpower, disabled
1	LED's dimmed, transceiver remains awake, transceiver is listening to the Master's transmissions on every slot, and transceiver's data port is shut down if the RTS line is deasserted (low). In this case, the transceiver needs to be awakened before it will be able to send data to the Master.
2	LED's dimmed, transceiver sleeps every other slot
3	LED's dimmed, transceiver sleeps 2 of 3 slots
4-31	LED's dimmed, transceiver sleeps the number of slots corresponding to the setting. For example, with a setting of 31 the transceiver sleeps 30 of 31 slots.

Current Draw

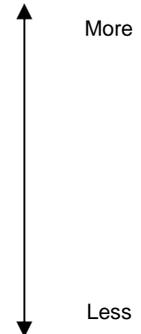**IMPORTANT NOTES**

1. Lowpower Mode is used only in MultiPoint Slaves using serial protocol. Power savings occur only when the Slave is linked. No power savings occur when the Slave is transmitting data. Lowpower Mode is of little value when a Slave has a constant, high throughput. MCUSpeed must be set to '0' and RF Data Rate must be set to '3' for Lowpower Mode to operate properly.
2. Additional power savings may be realized when the Number Repeaters is set to 1.
3. To communicate to a TTL port of a transceiver that is in Lowpower Mode, the RTS line must be held high to wake it up. The transceiver will wake up within approximately 20 milliseconds of when RTS goes high.
4. If the RTS line on the Slave is held high, the transceiver will remain in normal operation regardless of the Lowpower Mode setting. Once RTS is dropped the transceiver reverts to the Lowpower Mode.
5. If the transceiver has the DTRConnect option set to 1 or 2 and if the Lowpower Mode enabled (set to 1-31), the RTS line on the transceiver must be asserted for the 'DTRConnect' feature to operate properly.
6. The Diagnostic pins must be disabled or terminated to a cable for the Sleep current in Lowpower mode to match the specifications. To disable the Diagnostics pins, make sure that:
  - (1) Baud Rate / (D) Setup Port is set to "1" (Main Only)
  - (5) Multipoint Parameters / (B) Diagnostics is set to "0" (Off)

**(A) HIGH NOISE – THIS FEATURE IS NOT CURRENTLY FUNCTIONAL IN THE MM2**

The High Noise Option is useful in determining if out of band interference is affecting a radio link. A setting of 1 will provide a reduction of gain in the front end circuit thereby decreasing the affect of any out of band noise. The results will be seen as a lower signal value and a much lower noise value (as found in Radio Statistics or Diagnostics). If the noise is not reduced by a greater amount than the signal, the interference is most likely an in band issue.

When a noise problem is shown to be helped by way of the High Noise option, chances are that the noise may be further squelched by use of a Bandpass filter available for sale from FreeWave Technologies.

**(B) MCU SPEED**

MCU Speed controls the speed of the Micro Controller Unit in the transceiver. The default setting is 0 for low speed. A setting of 1 is required for Ethernet and UDP operation.

The following table describes the MCU speed settings.

Setting	Description	Notes
0	Low speed	Reduces current consumption
1	High speed	Required for 230 Kbaud data port rate

**Show Radio Statistics**

Radio Statistics in the Main Menu allows the user to view data transmission statistics gathered by the transceiver during the most recent session. This is valuable when the user needs to know the signal strength and noise levels of the link. Statistics are gathered during each data link and are reset when the next link begins. See display below.

```

FreeWave Users Manual - HyperTerminal
File Edit View Call Transfer Help
Enter Choice                                MODEM STATISTICS
Master-Slave Distance(m) 0008882
Number of Disconnects      0
Radio Temperature         27
Antenna Reflected Power   1
Transmit Current (mA)     0000
  Local Remote1 Remote2 Remote3
  J dBm  dBm    dBm    dBm
Noise  44 112   57    5
Signal 96  5   100   100
Rate %  73   12
000000
Press <Ret> for Freq Table, <Esc> to return to main menu_
Connected 0:00:43      Auto detect      19200 8-N-1      NUM

```

**NUMBER OF DISCONNECTS**

Any time the link between the Master and the Slave is broken and the radios lose Carrier Detect, it is recorded in the Number of Disconnects value. The value indicates the total number of disconnects that have occurred from the time the transceiver is powered on until the radio is put into Setup mode. Under ideal operating conditions, the number of disconnects should be 0. One or more disconnects may indicate a weak link, the presence of severe interference problems or loss of power to any of the radios in the link.

**ANTENNA REFLECTED POWER**

This statistic is not valid in the MM2-T, MM2-LV-T, MM2-HS or MM2-HS-LV series of radios.

**TRANSMIT CURRENT (MA)**

This statistic is not valid in the MM2-T, MM2-LV-T, MM2-HS or MM2-HS-LV series of radios.

### AVERAGE NOISE LEVEL

The average noise level indicates the level of background noise and interference at this transceiver and at each of the Repeaters in the link. The number is an average of the noise levels measured at each frequency in the transceiver's frequency hop table. The individual measurement values at each frequency hop channel are shown in the frequency table. Pressing the **Enter** key when the Radio Statistics menu is displayed, accesses the frequency table.

Ideally, noise levels should be below 70 J units and the difference between the average signal level and average noise level should be 30 or more. Noise levels significantly higher than this are an indication of a high level of interference that may degrade the performance of the link. High noise levels can often be mitigated with band pass filters, antenna placement or antenna polarization.

### AVERAGE SIGNAL LEVEL

The average signal level indicates the level of received signal at this transceiver and at each of the Repeaters in the link. For each of these, the signal source is the transceiver that transmits to it. The number is an average of the received signal levels measured at each frequency in the transceiver's frequency hop table. The individual measurement values at each frequency hop channel are shown in the frequency table. Pressing the **Enter** key when the Radio Statistics menu is displayed accesses the frequency table. For a reliable link, the margin should be at least 30 J units. Low Average Signal Levels can often be corrected with higher gain antennas, better antenna placement and/or additional Repeaters.

**Note:** Please consult the install manual for antenna and FCC requirements.

### OVERALL RCV RATE (%)

The Overall Receive Rate measures the percentage of data packets that were successfully transmitted from the Master to the Slave on the first attempt. A number of 75 or higher indicates a robust link that will provide very good performance even at high data transmission rates. A number of 15 or lower indicates a weak or marginal link that will provide lower data throughput. An Overall Receive Rate of 100% will provide approximately 100 KBaud of bandwidth with an RF Data Rate setting of 3 and approximately 150 KBaud of bandwidth with an RF Data Rate of 2. These numbers are reduced approximately 50% if one or more Repeaters are in the network.

### RADIO TEMPERATURE

The Radio Temperature value is the current operating temperature of the transceiver in degrees Celsius. For proper operation, a FreeWave transceiver must be in the temperature range of -40° to +85° C.


## MultiPoint Parameters

When installing MultiPoint networks it is important to do some up front planning. Unlike Point-to-Point networks, a Point-to-MultiPoint network requires several parameters are set consistently on all transceivers in the network. This includes RF data rate, Min and Max Packet Size, and FreqKey.

**Note:** If several independent MultiPoint networks are to be located in close proximity the planning becomes more critical. In such cases, it becomes very important to include as much frequency and time diversity as possible through use of different FreqKey, Min and Max Packet Size, and Hop Table settings. In some instances the use of the MultiMaster Synch option may be required.

## Edit MultiPoint Parameters

Selecting (5) Edit MultiPoint Parameters from the main menu displays the following window:

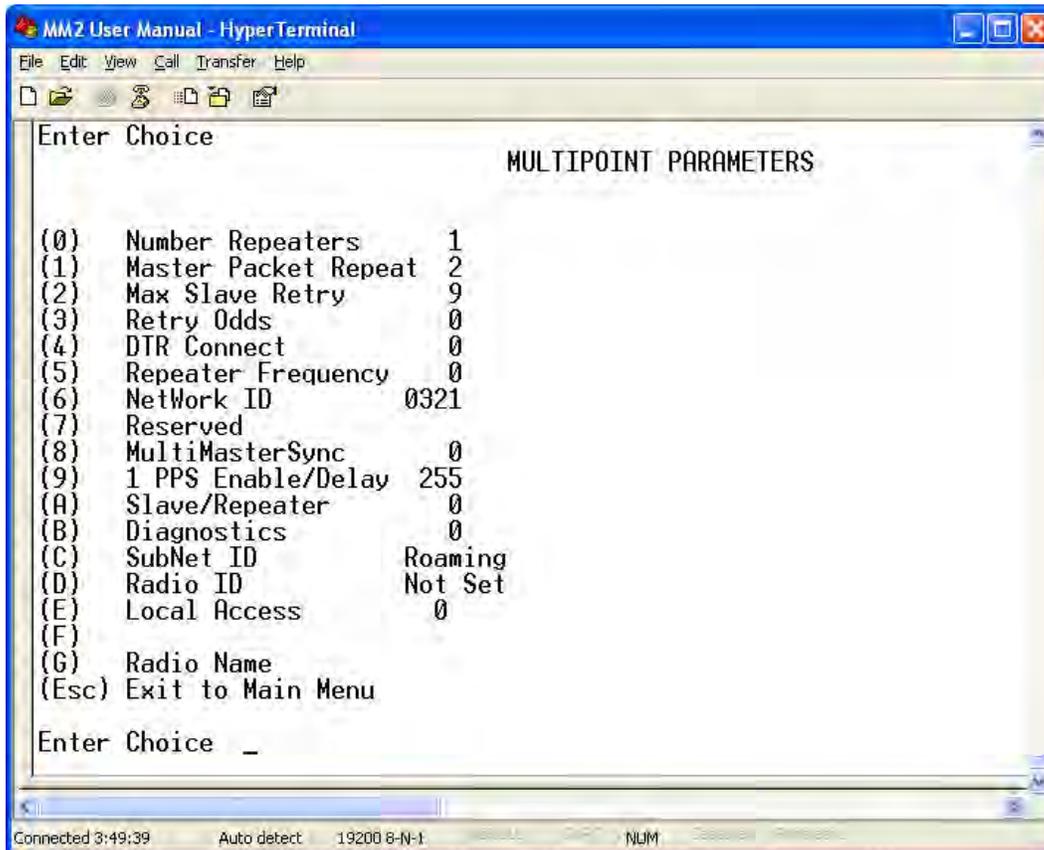

### (0) NUMBER REPEATERS

In a MultiPoint network it is critical to transmission timing to configure this parameter correctly. The value should be 0 if no Repeaters are in the network and 1 if any number of Repeaters are present. This parameter should be set to the same value in all transceivers in a MultiPoint network. Number Repeaters needs to be set to 1 when running Diagnostics from the Master.

### (1) MASTER PACKET REPEAT

In a Point-to-MultiPoint network, Slaves do not acknowledge transmissions from the Master. If Slaves did acknowledge all data transmissions, in a large network, the Master would soon become overwhelmed with acknowledgments from the Slaves. Without acknowledgements, 100% confidence every Slave has received every packet cannot be met. To address this issue, the user may modify the Master Packet Repeat setting, assigning a value between 0 (the packet is transmitted once) to 9 (the packet is transmitted 10 times). For networks with solid RF links, this parameter should be set to a low value such as 1 or 2. If a network has some weak or marginal links it

should be set with higher values. If a Slave receives a good packet from a Master more than once it will discard the repeated packets. Similarly, once a MultiPoint Repeater receives a good packet from the Master, it will discard any further repeated packets. In turn, the Repeater will send the packet out to the next Repeater or Slaves the number of times corresponding to its own Master Packet Repeat setting.

Increasing the Master Packet Repeat setting will increase the probability of a packet getting through, but will also increase latency in the network because each packet from the Master or Repeater is being sent multiple times. Therefore, it is important to find the optimal mix between network robustness, throughput, and latency. In general, a setting of 2 to 3 will work well for most well designed networks.

**Note:** The Master Packet Repeat may be set to 0 if the user software is capable of, or requires acknowledgment. In this case if a packet sent by the Master and not received by the Slave, the user software will control the retries as needed.

#### MASTER PACKET REPEAT IN MULTIPPOINT NETWORKS WITH REPEATERS

The Master Packet Repeat parameter must also be set in MultiPoint Repeaters since a Repeater will appear as a Master to a Slave. Therefore, the Repeater will send the packet out the number of times corresponding to its own Master Packet Repeat parameter. If this parameter is set improperly the reliability of the overall network may be diminished. For example, if a Master's Master Packet Repeat setting is 3, the link between the Master and Repeater should be robust. If the Repeater's Master Packet Repeat is set to 0, this could cause marginal communications between the Repeater and the Slaves. The Slaves communicating through this Repeater will only receive the initial packet from the Master with no repeats. Therefore, if the packet is not received on the first try, the Slave will not respond as expected.

#### (2) MAX SLAVE RETRY

The Max Slave Retry setting defines how many times (0 to 9) the Slave will attempt to retransmit a packet to the Master before beginning to use a back-off algorithm (defined by the Retry Odds setting). Slave retries will stop when an acknowledgement is received from the Master.

#### (3) RETRY ODDS

While packets transmitted from the Master to the Slaves in a MultiPoint network, are not acknowledged, packets transmitted from Slaves to the Master are. It is possible, that more than one Slave will attempt to transmit to the Master at the same time. Therefore, it is important that a protocol exists to resolve contention for the Master between Slaves. This is addressed through parameters (2) Max Slave Retry and (3) Retry Odds. Once the Slave has unsuccessfully attempted to transmit the packet the number of times specified in Max Slave Retry, it will attempt to transmit to the Master on a random basis. The Retry Odds parameter determines the probability that the Slave will attempt to retransmit the packet to the Master; a low setting will assign low odds to the Slave attempting to transmit. Conversely, a high setting will assign higher odds. An example of how this parameter might be used would be when considering two different Slaves in a MultiPoint network, one with a strong RF link and the other with a weak RF link to the Master. It may be desirable to assign higher Retry Odds to the Slave with the weaker link to give it a better chance of competing with the closer Slave(s) for the Master's attention.

**When Retry Odds = 0**, after the Slave has exhausted the number of retries set in the Max Slave Retry parameter and still not gained the Master's attention, the Slave's data buffer will be purged.

#### (4) DTR CONNECT

With the setting of 0 in the Slave, the transceiver will transmit when data is received. A setting of 1 will form a Point-to-Point link with the Master when the DTR line is high. With a setting of 2, the transceiver will transmit in bursts. This mode is valuable when a network has many low data rate devices and it is desirable to increase overall network capacity.

**Note:** If 'DTRConnect' is set to 1 and the 'RTS to CTS' function is enabled on the radio, then 'RTS to CTS' takes precedence over 'DTRConnect'.

**Note:** If 'DTRConnect' is set to '2' and 'RTS to CTS' is enabled, then 'RTS to CTS' is ignored. The transceiver has two separate transmit and receive user data buffers. These buffers are 2 Kbytes each. In case of a buffer overflow, the transceiver will output unpredictable data.

**(5) REPEATER FREQUENCY**

Repeater Frequency must be set to a 1 in a Repeater when a FreqKey other than that of the Master is desired. This condition occurs when parallel Repeaters in a network may have overlapping areas of responsibility. The default setting of 0 causes the Repeater to use the FreqKey set in Menu 3.

**Note:** When Repeater Frequency is set to 0 the FreqKey setting must match the Master or Repeater acting as the Master for the transceiver.

**(6) NETWORK ID**

NetWork ID allows MultiPoint networks to be established without using the Call Book. The default setting of 255 enables the Call Book. To enable NetWork ID the value must be set between 0 and 4095 (excluding 255). Since NetWork ID does not use serial numbers, MultiPoint Masters and Repeaters may be replaced without reprogramming all of the Slaves in the network. Slaves will link with the first Master or Repeater that it hears that has a matching NetWork ID. The Network ID function should be used in conjunction with the SubNet ID feature (If necessary).

Without having the serial numbers in the Call Book, a Slave may establish communications with different Masters, though not at the same time. This is very useful in mobile MultiPoint applications.

**(8) MULTIMASTER SYNCH**

MultiMaster Synch is reserved for applications, in both Point-to-Point and MultiPoint modes, with concentrations of Master units where it is necessary to reduce interference between the Masters. Please see application note [5412 Synch Colloc Master in Sync Mode](#) for more information.

**(9) 1 PPS ENABLE/DELAY**

The 1 PPS Enable/Delay option allows the radio network to propagate a 1PPS signal from the Master to all Slaves in a MultiPoint network. When this parameter is enabled a properly generated pulse applied on the DTR line of the Master will provide a 1 PPS pulse on the CD line of any Slave in the network. To use the 1 PPS Enable/Delay feature the steps outlined below must be followed:

1PPS Enable/Delay Setup:

1. The 1 PPS Enable/Delay parameter must be set to 0 in the Master.
2. The Master must have a 1 PPS pulse on the DTR pin.
3. The 1 PPS Enable/Delay parameter on the Slaves must be enabled. Slaves are calibrated at the factory.

Calibrating a Slave in 1PPS Enable/Delay mode

1. Trigger an oscilloscope on the 1 PPS pulse on the DTR line of the Master.
2. Monitor the CD line of the Slave.
3. If the timing on the Slave differs from the Master it may be adjusted via the value in the Slave's 1 PPS Enable/Delay parameter. The difference in time between each incremental integer value is 542.534nS. Changing the parameter to higher values decreases the Slave time delay and changing the parameter to lower values increases the time delay.

When properly calibrated the CD line of a Slave radio will output a pulse that goes high for about 2mS in synch with the 1 PPS pulse on the Master radio. The output on the Slave will occur within 20 microseconds of the input to the Master.

**Note:** When 1 PPS is enabled, the Master **must** have a 1 PPS pulse on its DTR pin, otherwise the RF network will not function.

**(A) SLAVE/REPEATER**

The Slave/Repeater mode allows a transceiver in a MultiPoint network to switch between Slave and Repeater functions. When in this mode, a transceiver will repeat any packets sent across the network as well as utilize the Data port. This is an alternative to needing two radios at one site.

**Note:** To operate a transceiver as a MultiPoint Slave/Repeater, the operation mode must be set to (7) MultiPoint Repeater and Slave/Repeater set to 1 in the MultiPoint Parameters menu.

**(B) DIAGNOSTICS**

This option provides diagnostics data to be viewed at the Master in parallel with application data. The diagnostic program MUST be run from the Master transceiver. Diagnostics requires the following:

1. Diagnostics set from 1 - 128 in the Master.
2. A second computer or serial connection to run the diagnostics software.
3. A diagnostics cable. (Available from FreeWave Technologies.)
4. Diagnostics software. (Available on the User Manual and System Tools CD.)

For more information on Diagnostics, please contact FreeWave Technical Support at (303) 381-9200.

**(C) SUBNET ID**

The Subnet ID function only works in MultiPoint Networks utilizing the Network ID option. In a MultiPoint Network, a Slave or Repeater will connect with the first Repeater or Master that it hears with the same Network ID. However, where communications need to be forced to follow a specific path the Subnet ID is quite useful. Subnet ID is particularly helpful to force two Repeaters in the same network to operate in series rather than in parallel, or if desired, to force Slaves to communicate to a specific Repeater for load balancing purposes. Two components exist with regard to the Subnet ID:

1. Rcv Subnet ID. This setting identifies which transceiver a Repeater or Slave will listen to.
2. Xmt Subnet ID. This setting identifies the ID on which this device transmits, and in turn which devices will listen to it. *The Xmt Subnet ID parameter is relevant for MultiPoint Masters and Repeaters only.*

The default (disable) setting for both Rcv and Xmt is F.


**Notes:** A Master with firmware before x.40 will always transmit and receive on 0. With firmware of 2.40 and greater (900MHz) the Master may be set to use alternate Subnet ID values. Changing these settings on the Master is not recommended under normal circumstances.

In some MultiPoint Networks, the FreqKey will be at the same setting for all transceivers. In other networks, where parallel Repeaters are introduced, the FreqKey value will need to change. See FreqKey and Repeater Frequency sections earlier in this manual for more information.

If both Rcv Subnet ID and Xmt Subnet ID are set to 0 the Subnet ID will show **Roaming** in the menu. This setting will allow a mobile Slave to roam from subnet to subnet and possibly from network to network.

This drawing depicts a Network in which Subnet ID's are used to force communications. In this example, Repeater1 *must* talk directly to the Master; Repeater2 *must* talk directly to Repeater1. Slaves 1, 2, and 3 are forced along the direction of the solid lines. Slave4 may link to the first Master or Repeater it hears.

The respective Subnet ID diagram and settings are shown below.

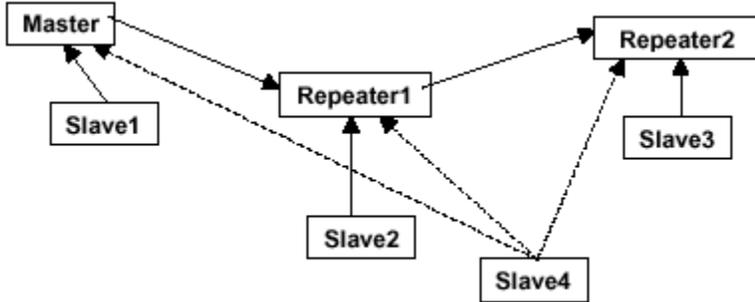

**Subnet ID Settings**

Transceiver	Rcv Subnet ID	Xmit Subnet ID	Other Information
Master	F	F	The Master uses 0,0.
Master	0	0	The Xmit Subnet ID value may be set in the Master. The default settings (F, F) actually use 0, 0. The Rcv Subnet ID on the Master has no affect on the network.
Repeater1	0	1	A 0 will force the transceiver to link only to the Master.
Repeater2	1	2	Rcv SubnetID = 1 forces communication through Repeater1. Repeater1 transmits on SubnetID 1.
Slave1	0	0 or F	Rcv SubnetID = 0 forces communication through Master.
Slave2	1	0 or F	Rcv SubnetID = 1 forces communication through Repeater1.
Slave3	2	0 or F	Rcv SubnetID = 2 forces communication through Repeater2.
Slave4	0	0	The 0, 0 setting allows the Slave to link with the first Master or Repeater it hears with the correct NetWork ID.

**(D) RADIO ID**

Option (D) allows a transceiver to be designated with an arbitrary, user selectable, 4 digit number which identifies the transceiver in diagnostics mode.

**(E) LOCAL MODE**

Option (E) allows the user to access an MM2 series Multi-point slave with a local master. This Master is not the network master. Please see Application note 5457 for more information.

## Overlapping MultiPoint Networks

Overlapping MultiPoint networks may be set up effectively with FreeWave transceivers when several key parameters are set correctly. Overlapping MultiPoint networks are defined as networks using different Masters which share or overlap in a specific geographic area. It may also include co-located transceivers configured into different networks. See application note [5412 Synch Colloc Master in Sync Mode](#) for more details.

Co-located MultiPoint networks require the following parameters be unique for each network:

- Network ID, unless using Call Book
- Frequency Key (in conjunction with Repeater Frequency)
- Max Packet Size
- Min Packet Size

For more questions about the installation of Point-to-MultiPoint networks, please contact FreeWave Technical Support at (303) 381-9200.

## Passwords

Option (8) Change Password in the Main Menu allows the user to set a password that will prevent access to or changing of any of the radio's parameters. This option is useful if it is desirable to prevent unauthorized personnel from gaining access to the radio settings.

### Setting a Password

Selecting (8) Chg Password will display the following prompt.

New PW? (<esc> to exit)

To back out of the process and not enable the password press **Esc**. To set a password, type in **exactly 4 characters**. The process can be canceled, at any point, by pressing the **Esc** key. Once the 4 characters have been entered the following prompt will appear:

<Enter> to accept, <esc> to quit

To accept the password as entered and enable the feature, press the **Enter** key. The chosen password will be displayed on the line above. The password is case sensitive and every keystroke is a character. To quit the process and not enable the password, press **Esc**.

#### CHANGING A PASSWORD

Once the password feature has been enabled, it is possible to change to a new password. To enter a new password select, (8) from the Main Menu. At the **Enter Security Code** prompt enter, the current password. Once the password has been entered correctly, the prompt to enter the new password will appear. This is case sensitive and every keystroke is a character. At any point this process may be cancelled by pressing **Esc**.

#### DISABLING A PASSWORD

The process to disable the password is similar to the process to change the password. However, when prompted to enter the new password the follow the steps below:

1. Hold down the **Alt** key and type **0255**.
2. Release the **Alt** key.
3. Repeat this step 3 more times (hold **Alt** and type **0255** a total of 4 times).

**Important Note: If the password feature is enabled and the password is forgotten, the transceiver will need to be returned to FreeWave to have the password disabled.**

## **Time Divisible Multiple Access (TDMA)**

Time Divisible Multiple Access (TDMA) allows radios to do various operations on specific time slots. This option is only used for peer-to-peer communications or when applications are very time specific.

For additional information about TDMA, contact FreeWave Technical Support at (303) 381-9200.

## Additional Settings

Some additional parameters are not shown in the Setup menu which may be used with FreeWave transceivers. These additional parameters may be set with DOS based software. The most common additional settings used by users are described below.

### Low Baud Rates

The transceiver's baud rate may be set to 300, 600, or 900 baud.

### Setup Timeout

When enabled, this mode invokes a timeout feature for the Setup Menu. If the transceiver goes into Setup mode and does not receive legitimate menu selections within 3 to 5 seconds, it will exit Setup and resume its previous mode.

For more information, contact FreeWave Technical Support at (303) 381-9200.

## Factory Default Settings

FreeWave MM2 900MHz transceivers are shipped from the factory with the following Default Settings:

Operation Mode	Default
Point to Point Master	0
Set Baud Rate	Default
Baud Rate	115200 (MM2-T) 1382400 (MM2-HS)
(A) Data Parity	0
(B) Modbus RTU	0
(C) RS232/485	0
(D) Setup Port	1
(E) TurnOffDelay/OnDelay	0/0
(F) Flow Control	0
Radio Parameters	Default
(0) FREQ KEY	5
(0) HOP TABLE VERSION	0
(1) HOP TABLE SIZE	112
(2) HOP FREQ OFFSET	0
(3) Frequency Zone	All 1's (Enabled)
(4) Government Rules	0
(1) MAX PACKET SIZE	8
(2) MIN PACKET SIZE	9
(3) XMT RATE	1
(4) RF DATA RATE	3
(5) RF XMT POWER	10
(6) SLAVE SECURITY	0
(7) RTS TO CTS	0
(8) RETRY TIMEOUT	255
(9) LOW POWER MODE	0
(A) High Noise	0
(B) MCU Speed	0
(C) Remote LED	0

Ethernet Options:	Default
(0) Ethernet Mode	0
(1) Half/Full Duplex	0
(2) Slave IP Stack	0
(3) Slave UDP Mode	0
(4) IP Address	
MultiPoint Parameters	Default
(0) NUMBER OF REPEATERS	1
(1) MASTER PACKET REPEAT	2
(2) MAX SLAVE RETRY	9
(3) RETRY ODDS	9
(4) DTR CONNECT	0
(5) REPEATER FREQUENCY	0
(6) NETWORK ID	255
(7) RESERVED	-
(8) MULTI MASTER SYNC	0
(9) 1 PPS ENABLE DELAY	255
(A) SLAVE/REPEATER	0
(B) DIAGNOSTICS	0
(C) SUBNET ID	"Disabled"
Rx ID	F
Tx ID	F
(D) RADIO ID	Not Set
(E) Local Mode	0
(F) Radio Name	"blank"

## Examples of Data Communication Links


FreeWave transceivers' versatility allows data communication links to be established using a variety of different configurations.

The example below shows the most common and straightforward link; a Master communicating to a Slave in a Point-to-Point link.




The example below shows how a link might be set up using a Repeater. The Repeater may be located on a hilltop or other elevated structure enhancing the link from the Master to the Slave. In this configuration, it may be desirable to use an external Omni directional antenna at the Repeater. Yagi antennas may be used at both the Master and Slave transceivers.

When a Repeater is used, the RF throughput is cut in half.




The example below shows a link with two Repeaters between the Master and Slave. With two Repeaters more flexibility in getting around obstacles and greater total range is possible. Once again, it would be desirable to use external Omni directional antennas with the Repeaters, and attaching a Yagi to the Master and Slave to increase the range of the link.


When two Repeaters are used no further degradation in the RF throughput of the link is experienced.

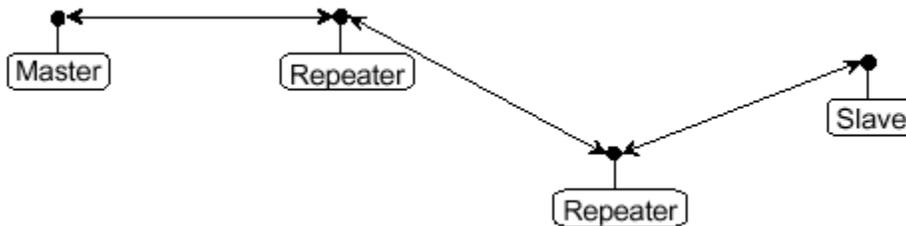


The example below shows a configuration where a Master routinely calls a number of Slaves at different times. The Master is communicating with a transceiver designated as a Slave/Repeater that is connected to a remote device. Since this device is placed in an elevated location, the transceiver may also be used as a Repeater when it is not used as a Slave. At any time the Master may call any of the Slaves, establish a connection, and send and receive data.

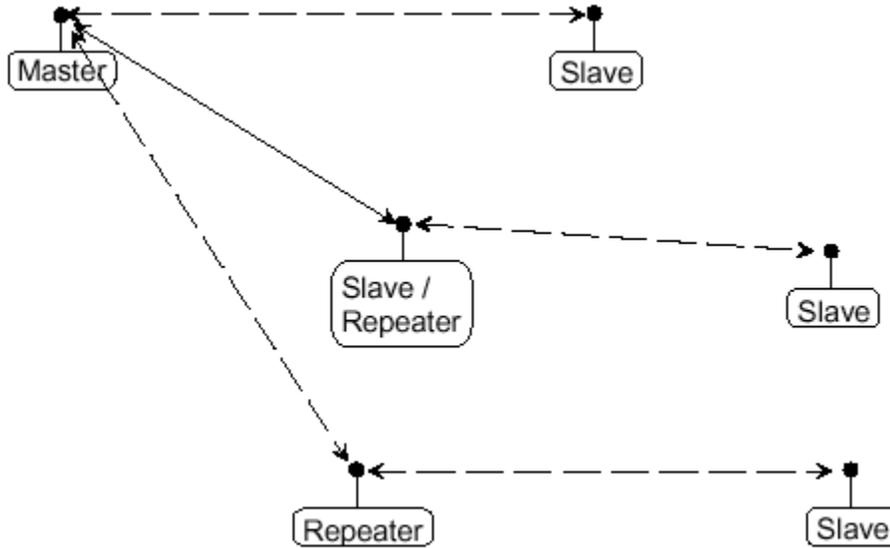

The next example depicts a standard Point-to-MultiPoint network. From the Master, any data is broadcast to all three Slaves, one of which receives it through a MultiPoint Repeater. The data is in turn sent out of the serial port of each of the three Slaves. The end device should be configured to interpret the serial message and act on it if necessary.

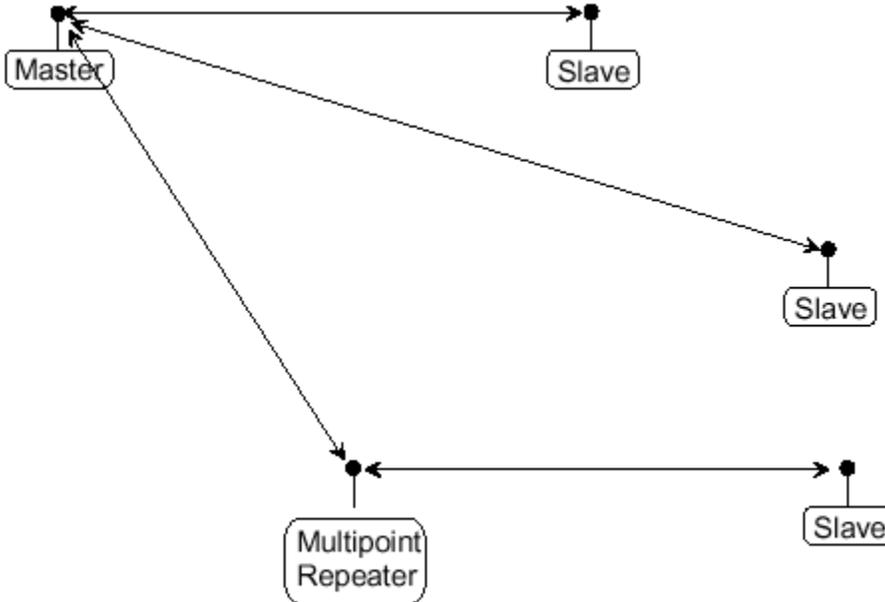

The last example is a Point-to-MultiPoint network which uses one of the sites as a Slave/Repeater. This network functions in the same manner as a standard MultiPoint network with Repeaters. However, the number of radios may be reduced with the use of the MultiPoint Slave/Repeater feature.

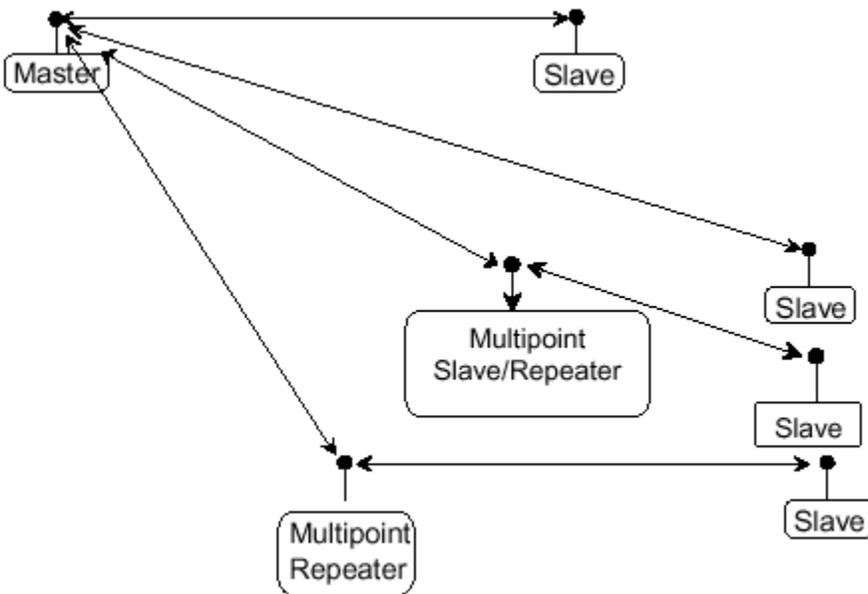

## Additional Transceiver information

### Board Level Pinout

J1 - 14 pin, 2.00mm centers, Samtec TMM series, TMM-107-01-G-D-SM-options

Mates with Samtec CLT, SMM, MMS, SQT, ESQT, SQW, TLE, TCSD, TLSD series

1	Input	Power		Model #MM2-LV-T: 3.3 VDC Model #MM2-T: 5.0 VDC
2	Input	/Reset		Active Low, 100 $\mu$ s pulse
3	Input	Data Terminal Ready	DTR	TTL <sup>2</sup>
4		Ground	GND	
5	Output	Transmitted Data	TxD	0 – 3.3 V TTL <sup>1</sup>
6		Ground	GND	
7	Input	Received Data	RxD	TTL <sup>2</sup>
8	Output	Carrier Detect	CD	0 – 3.3 V TTL <sup>1</sup>
9	Input	Request To Send	RTS	TTL <sup>2</sup>
10	Output	Clear To Send	CTS	0 – 3.3 V TTL <sup>1</sup>
11	Input	Diag Received Data		TTL <sup>3</sup>
12	Output	Diag Transmitted Data		0 – 3.3 V TTL <sup>1</sup>
13		Ground	GND	
14	Output	Baud Clock		


<sup>1</sup> – 3.3V output assumes greater than 3.3 V input voltage. At 3V input voltage, signal will be 0 – 3 V TTL.

<sup>2</sup> – 0-5V TTL, 330  $\Omega$  resistor in series.

<sup>3</sup> – 0-5V TTL

**Note:** See the following drawing for identification of pin numbers.

- 1- B+ (+5.VDC +/-5%)
- 2- Interrupt
- 3- DTR
- 4- Ground
- 5- TXD
- 6- Ground
- 7- RXD
- 8- CD
- 9- RTS
- 10- CTS
- 11- Diag RX
- 12- Diag TX
- 13- Ground
- 14- Baud Clock

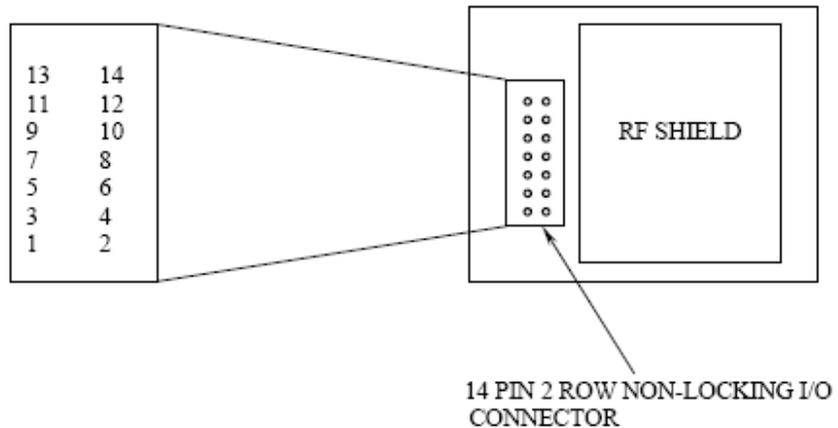

## MM2-T-U and MM2-LV-T-U 900 MHz Transceiver Specifications

Specification	
<b>Frequency</b>	902 to 928 MHz
<b>Transmit</b>	
Output Power	10mW to 1W (+30dBm) See RF transmit power settings.
Range	60 miles Line Of Sight, 0 dB antenna gain
Modulation	2 level GFSK
Spreading method	Frequency hopping
Occupied bandwidth @ 60dB	230 kHz
Channel Spacing	230 kHz
<b>Receive</b>	
Sensitivity	-108 dBm @ 115.2 kbps for $10^{-4}$ bit error rate -103 dBm @ 154 kbps for $10^{-4}$ bit error rate
IF Selectivity	-40 dB at $f_c \pm 230$ kHz
RF Selectivity	50 dB at 896 MHz, 935 MHz
Dynamic Range	+10 dBm 3rd Order Intercept Point at Input Connector
<b>Data transmission</b>	
Data rate	115.2 kbps sustained throughput* 57.6 kbps sustained throughput <sup>†</sup> with Repeaters.
Error detection	32 Bit CRC, retransmit on error
Data encryption	Substitution, dynamic key
Max link throughput	115.2 KBaud
Data interface	TTL
<b>Power requirements</b>	
Supply voltage	MM2-LV-T-U: 3.3 VDC MM2-T-U: 5.0 VDC
Transmit current, for full power at 100% duty cycle	Model #MM2-LV-T-U: 3.3 VDC: 850 mA Model #MM2-T-U: 5.0 VDC: 760 mA
Receive current	Model #MM2-LV-T-U: 3.3 VDC: 130 mA Model #MM2-T-U: 5.0 VDC: 125 mA
Idle current	Model #MM2-LV-T-U: 3.3 VDC: 35 mA Model #MM2-T-U: 5.0 VDC: 37 mA
Sleep current	Model #MM2-LV-T-U: 3.3 VDC: 7 mA Model #MM2-T-U: 5.0 VDC: 8 mA
Hibernate Current	Model #MM2-LV-T-U: 3.3 VDC: 0.5 mA Model #MM2-T-U: 5.0 VDC: 0.5 mA
Operating modes	Point-to-Point Point to-MultiPoint TDMA
Operating environment	-40° C- +85° C, 0 to 95% humidity non-condensing

\* At 100% receive success rate. RF data rate setting of 2.

† Slave-to-Master sustained throughput. At 100% receive success rate. RF data rate setting of 2

**MM2-T-U and MM2-LV-T-U 900 MHz Transceiver Specifications (cont.)**

	<b>MM2-T-U, MM2-LV-T-U</b>
Data Port	14-pin PCB connector
Enclosure	Bare board
Dimensions	9.6 mm H x 31.5 mm W x 50.8 mm L
Weight	14 grams
Power requirements	<ul style="list-style-type: none"><li>▪ Model #MM2-LV-T-U: 3.3 VDC</li><li>▪ Model #MM2-T-U: 5.0 VDC</li></ul>
Antenna	MMCX female connector. External antenna required.
FCC Identifier:	KNY-42182112519
IC Identifier:	2329B-FGR2

## MM2-HS-T-U and MM2-HS-LV-T-U 900 MHz Transceiver Specifications

Specification	
<b>Frequency</b>	902 to 928 MHz
<b>Transmit</b>	
Output Power	10mW to 1W (+30dBm) See RF transmit power settings.
Range	30 miles Line Of Sight, 0 dB antenna gain
Modulation	2 level GFSK
Spreading method	Frequency hopping
Occupied bandwidth @ 60dB	1.5 MHz
Channel Spacing	1.5 MHz
<b>Receive</b>	
Sensitivity	-98 dBm @ 614 kbps for $10^{-4}$ bit error rate -97 dBm @ 867 kbps for $10^{-4}$ bit error rate -93 dBm @ 1.2 Mbps for $10^{-4}$ bit error rate
IF Selectivity	-40 dB at $f_c \pm 1.5$ MHz
RF Selectivity	50 dB at 896 MHz, 935 MHz
Dynamic Range	+10 dBm 3rd Order Intercept Point at Input Connector
<b>Data transmission</b>	
Data rate	1.01 Mbps sustained throughput* 505 kbps sustained throughput <sup>†</sup> with Repeaters.
Error detection	32 Bit CRC, retransmit on error
Data encryption	Substitution, dynamic key
Max link throughput	1.01 Mbps
Data interface	TTL
<b>Power requirements</b>	
Supply voltage	Model #MM2-HS-LV-T-U: 3.3 VDC Model #MM2-HS-T-U: 5.0 VDC
Transmit current, for full power at 100% duty cycle	Model # MM2-HS-LV-T-U: 3.3 VDC: 730 mA Model # MM2-HS-T-U: 5.0 VDC: 850 mA
Receive current	Model # MM2-HS-LV-T-U: 3.3 VDC: 145 mA Model # MM2-HS-T-U: 5.0 VDC: 135 mA
Idle current	Model # MM2-HS-LV-T-U: 3.3 VDC: 25 mA Model # MM2-HS-T-U: 5.0 VDC: 45 mA
Sleep current	Model # MM2-HS-LV-T-U: 3.3 VDC: 6 mA Model # MM2-HS-T-U: 5.0 VDC: 8 mA
Hibernate current	Model # MM2-HS-LV-T-U: 3.3 VDC: 0.5 mA Model # MM2-HS-T-U: 5.0 VDC: 0.5 mA
Operating modes	Point-to-Point Point to-MultiPoint TDMA
Operating environment	-40° C- +85° C, 0 to 95% humidity non-condensing

\* At 100% receive success rate. RF data rate setting of 2. Max Packet Size = 8, Min Packet Size = 0.

† Slave-to-Master sustained throughput. At 100% receive success rate. RF data rate setting of 2. Max Packet Size = 8, Min Packet Size = 0.


**MM2-HS-T-U and MM2-HS-LV-T-U 900 MHz Transceiver Specifications (cont.)**

	<b>MM2-HS-T-U, MM2-HS-LV-T-U</b>
Data Port	14-pin PCB connector
Enclosure	Bare board
Dimensions	9.6 mm H x 31.5 mm W x 50.8 mm L
Weight	14 grams
Power requirements	<ul style="list-style-type: none"><li>▪ Model #MM2-LV-T-U: 3.3 VDC</li><li>▪ Model #MM2-T-U: 5.0 VDC</li></ul>
Antenna	MMCX female connector. External antenna required.
FCC Identifier:	KNY-42182112519
IC Identifier:	2329B-FGR2

# Mechanical Drawing

The document contains confidential and proprietary information of Freewave Technologies, Inc. The contents of this drawing shall not be disclosed, reproduced, duplicated, disseminated or used for purposes other than authorized in writing by Freewave Technologies, Inc.

PART NO. **MEGA-MINI**

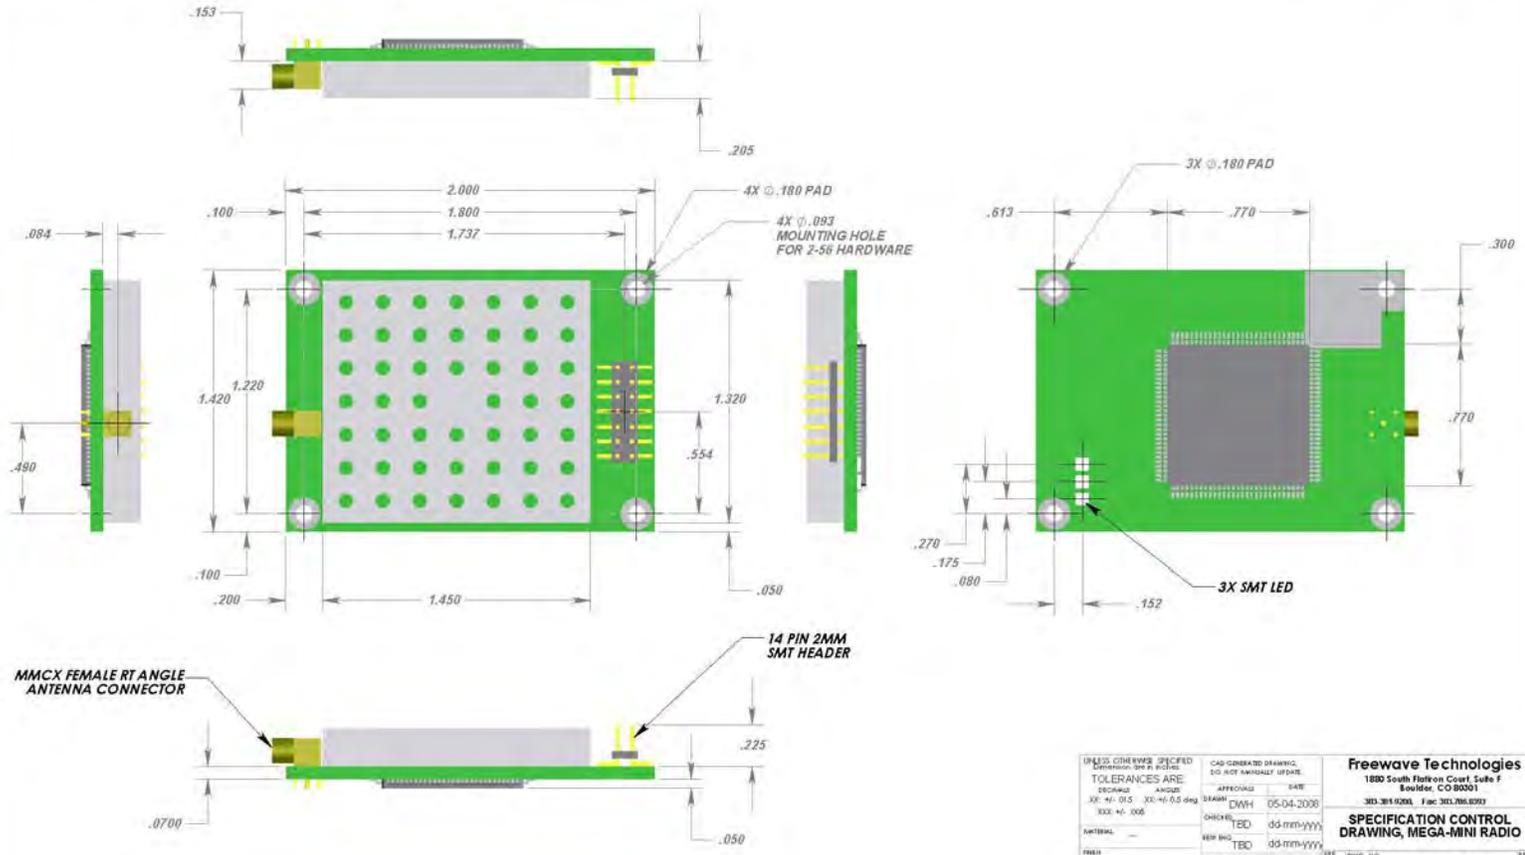

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		CAD GENERATED DRAWING. DO NOT MANUALLY UPDATE.		<b>Freewave Technologies</b> 1800 South Foothill Court, Suite F Boulder, CO 80501 303.381.0200, Fax: 303.756.8393	
TOLERANCES ARE: FRACTIONS ANGLES XX .XX .015 XX .XX .05 deg XXX .XX .005		APPROVAL	DATE	SPECIFICATION CONTROL DRAWING, MEGA-MINI RADIO	
DRAWN	DWH	05-04-2006			
CHECKED	TED	05-mm-yyyy			
DESIGNED	TED	05-mm-yyyy			
QUALIFIED	TED	05-mm-yyyy	REV	DWG. NO.	REV
DO NOT SCALE DRAWING		SCALE	A	MEGA-MINI	G
				SHEET 1	OF 1

## FreeWave Technical Support

For up-to-date troubleshooting information check the Support page at [www.FreeWave.com](http://www.FreeWave.com).

FreeWave provides Technical Support, Monday through Friday, 8:00 AM to 5:00 PM, Mountain Time (GMT -7) Call toll-free at **1-866-923-6168** or **factory direct after hours at 303-381-9200** or email at [moreinfo@FreeWave.com](mailto:moreinfo@FreeWave.com)

## Errata

### Firmware Version 8.68

- Initial Release

### Firmware Version 8.69

#### *Fixes/Improvements*

- Link acquisition issue corrected

### Firmware Version 8.70

- Minor back-end changes

### Firmware Version 8.71

#### *Fixes/Improvements*

- Improved efficiency and reliability of writing TDMA settings to memory
- Improved efficiency and reliability of writing Diagnostics settings to memory

### Firmware Version 8.73

#### *Fixes/Improvements*

- RS-485 protocol fixed
- "Use Break Command to Enter Setup" function fixed
- Grand Master mode (for "Multi-Master Sync" feature) fixed